



LANTERN STACK (Plug-in)


SAFETY INFORMATION

Please contact a licensed electrician. Only suitable for direct mounting to non-combustable surfaces. Under no circumstances can Anna Karlin lighting be mounted on normally flammable surfaces. Suitable for dry, indoor use only. Maximum ambient temperatures: 25°C

INSTALLATION OF THIS FIXTURE REQUIRES 2 PEOPLE, AND THE USE OF AN EXTERNAL LED DRIVER (INCLUDED).


LAMPING

Hardwired LED light source

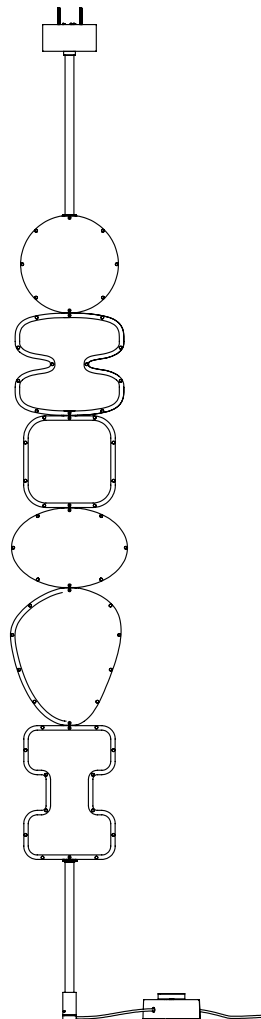



LANTERN STACK (Plug-in)

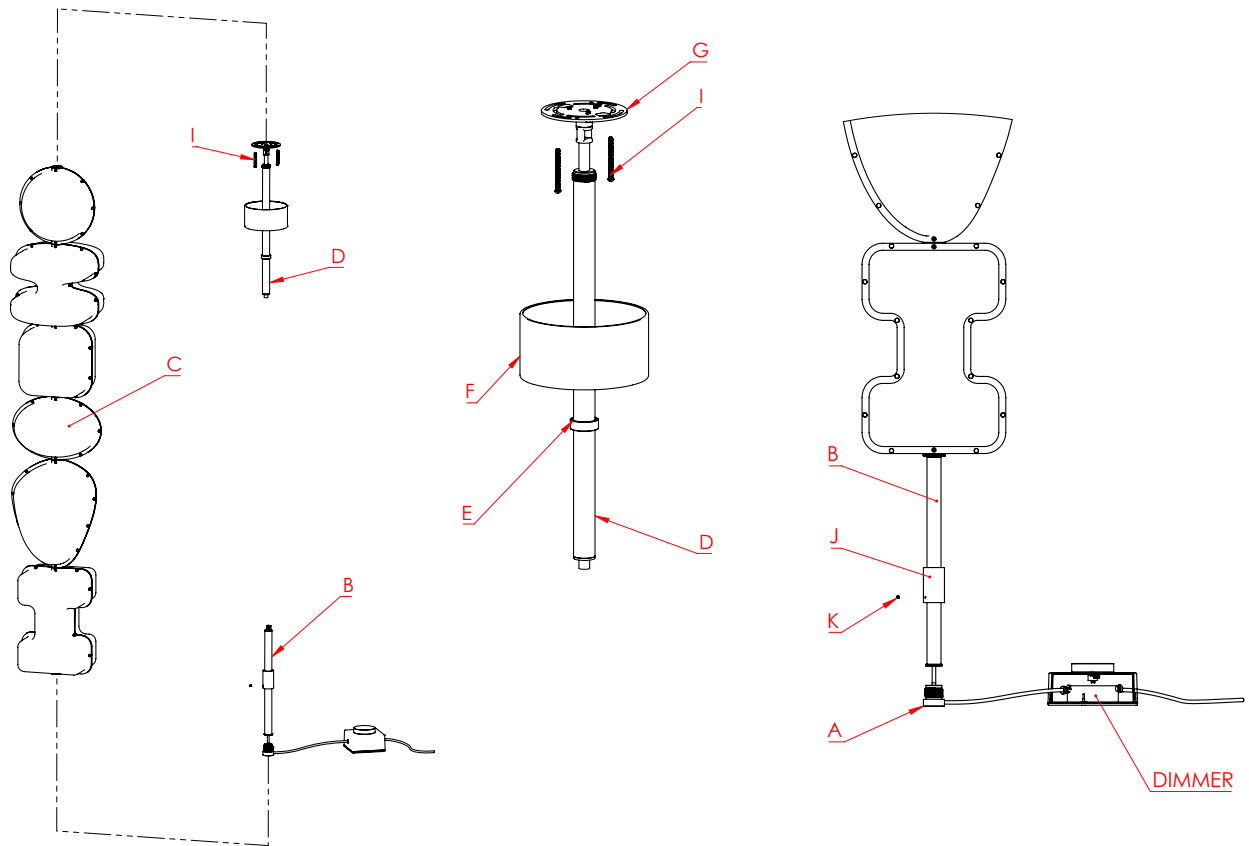


INSTALLATION OF THIS FIXTURE REQUIRES 2 PEOPLE. THROUGHOUT ASSEMBLY AND INSTALLATION, TAKE EXTRA PRECAUTIONS WHEN HANDLING THE FIBERGLASS SHELLS TO AVOID DAMAGE

1. Install threaded foot cup (A) to floor directly below ceiling mount point, using appropriate hardware/anchor (not included). Use plumb or laser to make sure they are perfectly aligned. Ensure that the cord exit hole is facing in the appropriate direction.
2. Lay fixture (C) on its side, then screw bottom end of Stem (D) into open hole at the top of fixture (C). Tighten securely.
3. Feed power cable through the center of segment (B) and out the bottom, then screw top end of segment (B) to the thread coming out at the bottom of fixture (C), taking care not to twist the cable.
4. Splice power cable to LED driver inside dimmer box. **SEE PAGE 3 FOR DETAILS.**
5. Carefully move assembled fixture into vertical position on top of floor plate assembly (A). Hold steadily in this position.
6. Loosen collar (E), then lower canopy (F) to reveal mounting bracket (G).
7. Raise entire fixture up to meet ceiling, then attach bracket to ceiling using appropriate hardware/ anchor (not included). There should now be a small gap between bottom of fixture and floor plate.



LANTERN STACK (Plug-in)

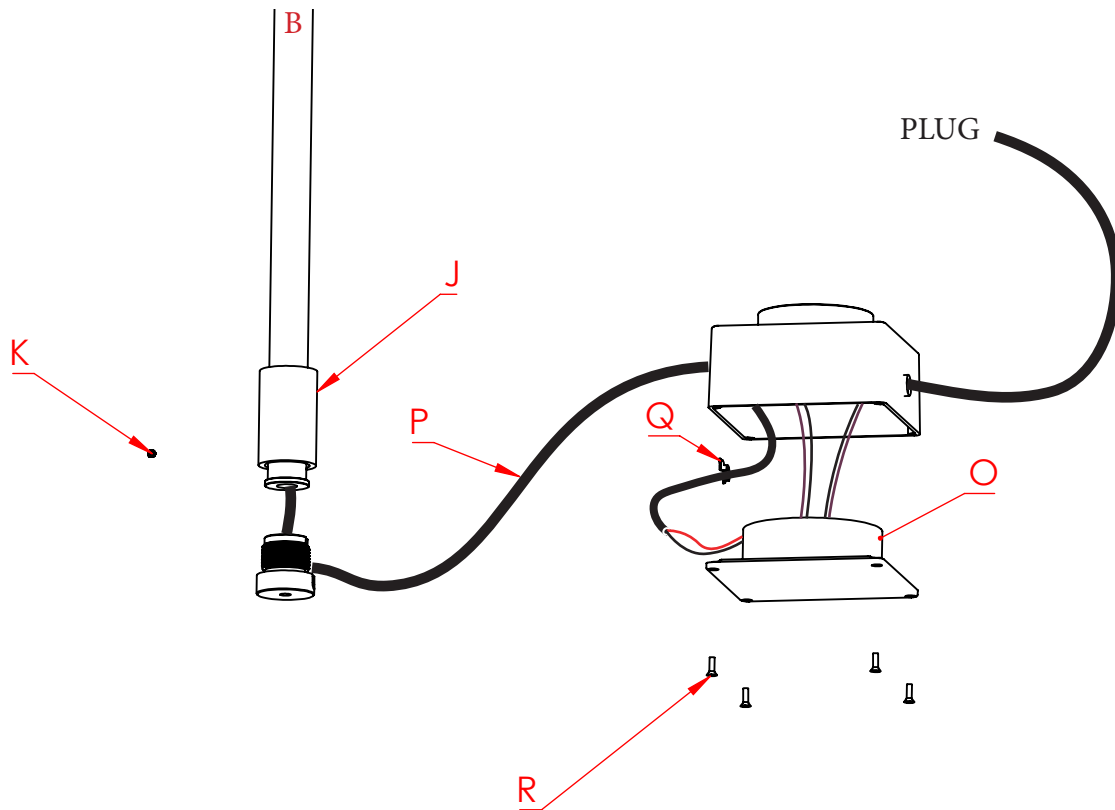

INSTALLATION OF THIS FIXTURE REQUIRES 2 PEOPLE. THROUGHOUT ASSEMBLY AND INSTALLATION, TAKE EXTRA PRECAUTIONS WHEN HANDLING THE FIBERGLASS SHELLS TO AVOID DAMAGE

8. Gripping tube segment (B) lower part (J) and screw/thread it down onto part (A) as far as it can go before hitting your power cable. DO NOT OVERTIGHTEN. Then, tighten set screw (K) to hold securely.
- 4a. Remove screws (R) on bottom of dimmer box assembly, then lift off the bottom plate and attached driver (O). DO NOT DISCONNECT ANY EXISTING WIRE CONNECTIONS.
- 4b. Feed power cable (P) through open hole in dimmer box, then splice the BLACK wire from the cable to the RED wire on the driver, and the WHITE wire from the cable to the BLACK wire on the driver.
- 4c. Using pliers, crimp the strain relief (Q) onto the power cable where marked.
- 4d. Carefully pull the main cables through the holes and fit the bottom plate onto the dimmer box body, then replace the screws. Take care not to pinch any wires during this step.