


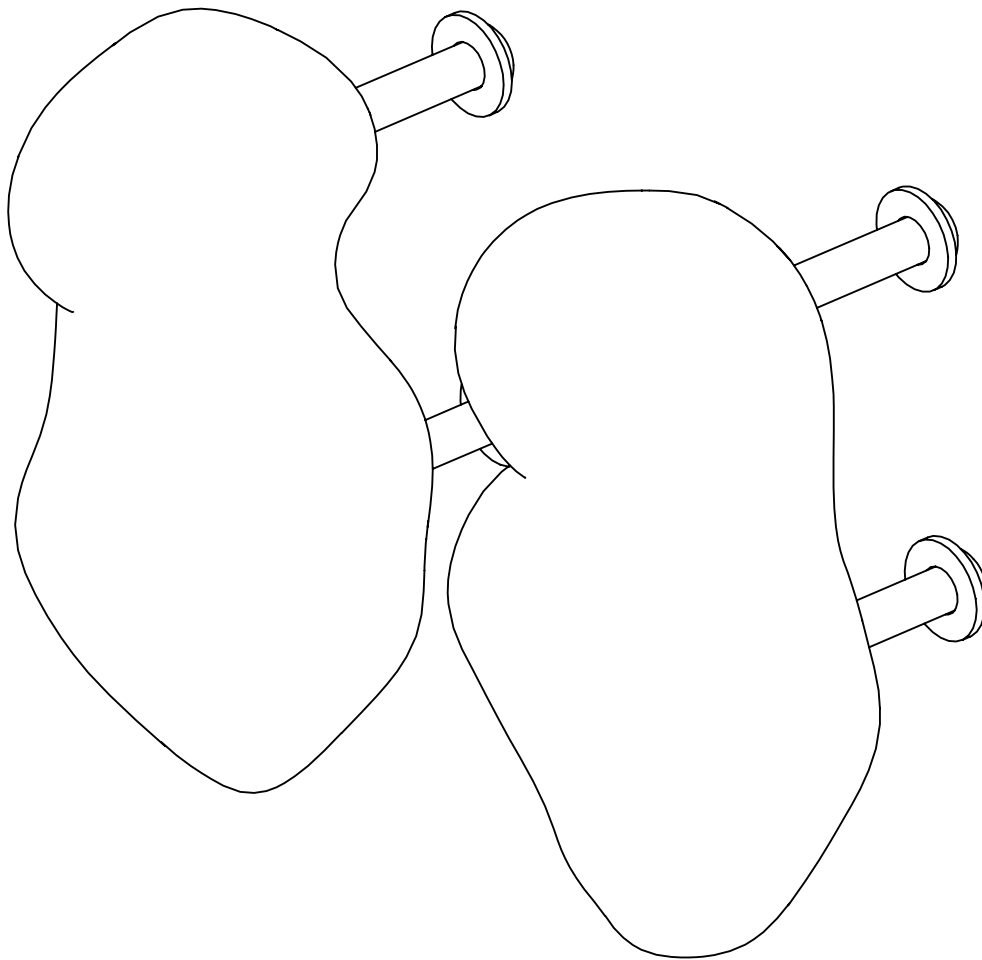



WILDER PULL (NBP)

HARDWARE : 4X 1/4-20 SCREWS
 4X WASHERS





WILDER PULL (NBP)

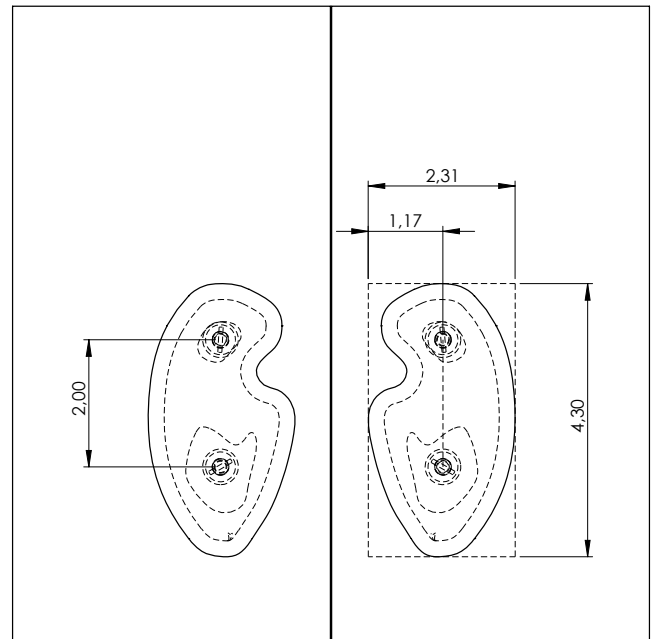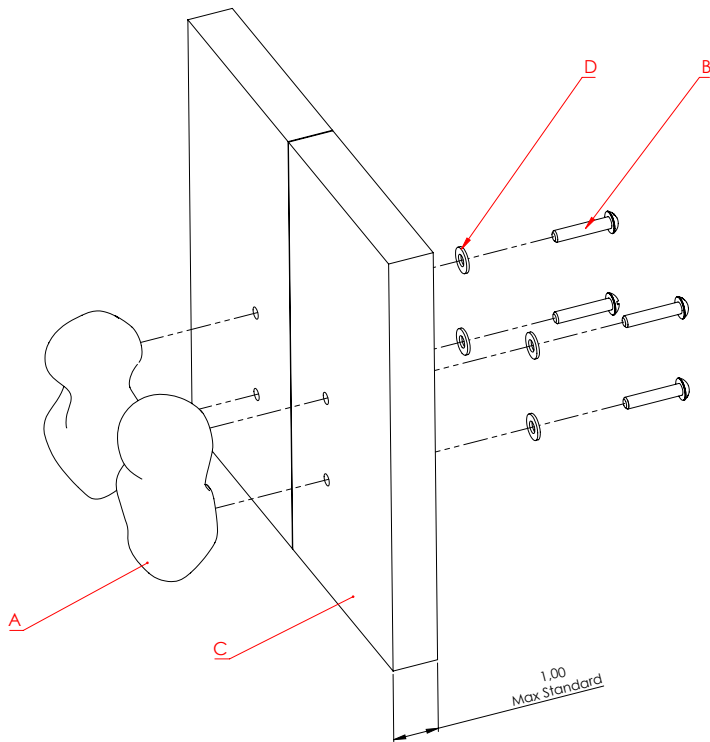

1. Carefully unpack all parts.
2. Drill two 17/64 inch (0.265in) clearance holes 2 inches apart (center to center) for each handle on your surface (C).
3. Place washer (D) over the 1/4-20 screw (B), pass both through the hole and tighten firmly to Handle (A).