


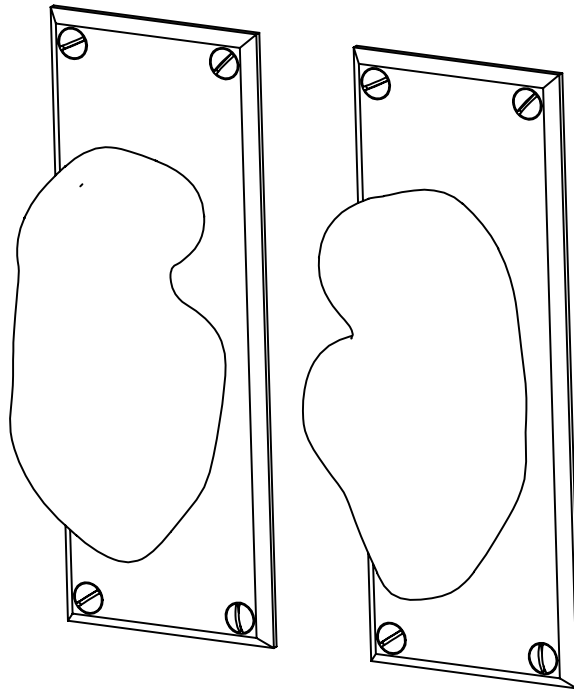

WILDER PULL (WBP)


HARDWARE : 4× 8-32 Machine Screws (Per)
4× #8 × Wood Screws (Per)





WILDER PULL (WBP)


1:1 Scale

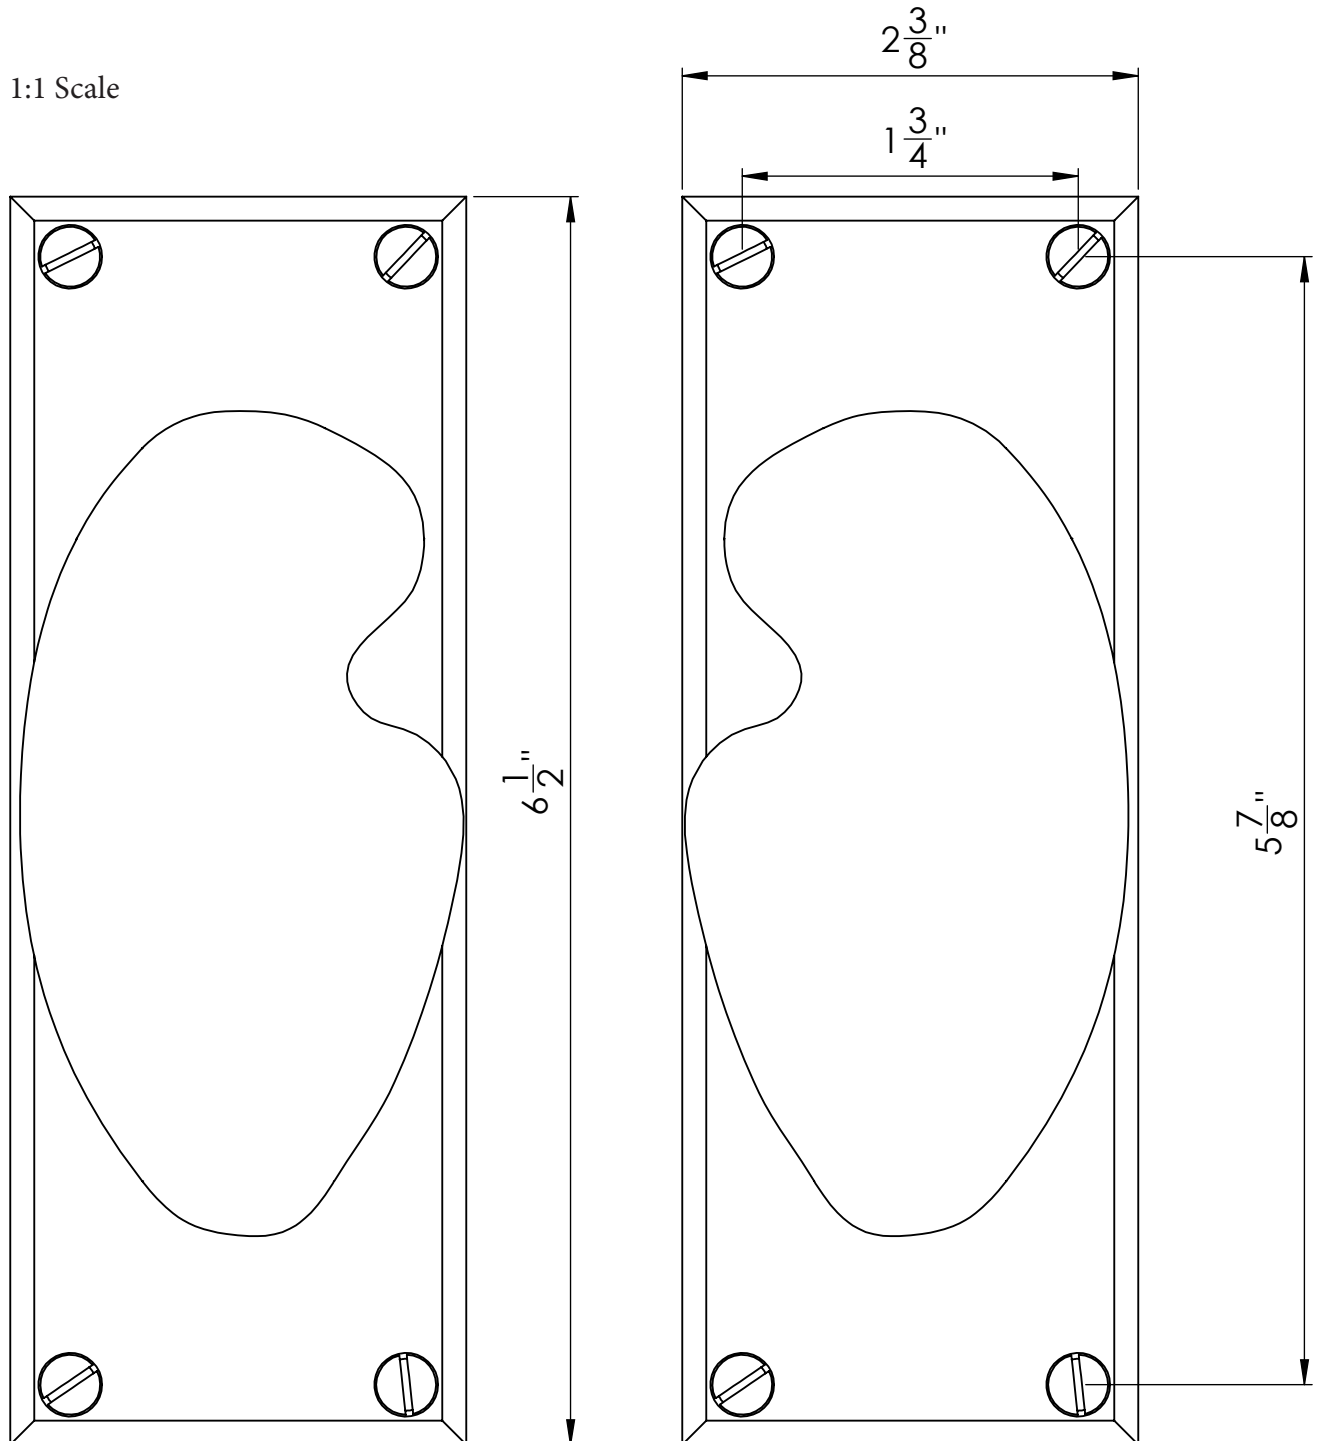

1. Carefully unpack all parts.
2. Predrill or drill 4× holes for each handle on your surface (C).



WILDER PULL (WBP)

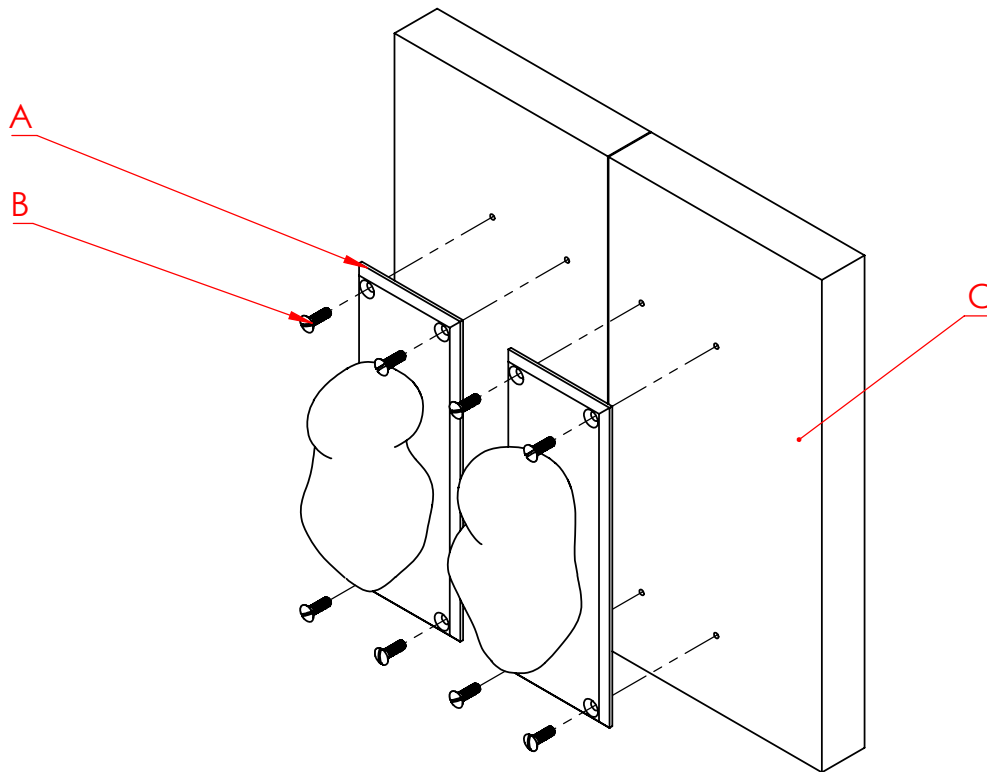

3. Use wood or machine screws [B] depending on your surface/anchor, firmly thread Pull Backplate[A] to surface [C].