



FACE LIGHT (PLUG-IN)


SAFETY INFORMATION

Please contact a licensed electrician. Only suitable for direct mounting to non-combustable surfaces. Under no circumstances can Anna Karlin lighting be mounted on normally flammable surfaces. Suitable for dry, indoor use only. Maximum ambient temperatures: 25°C

INSTALLATION OF THIS FIXTURE REQUIRES 2 PEOPLE.


LAMPING

1× G9 bulb (max 60W, 4.5W LED bulb included).

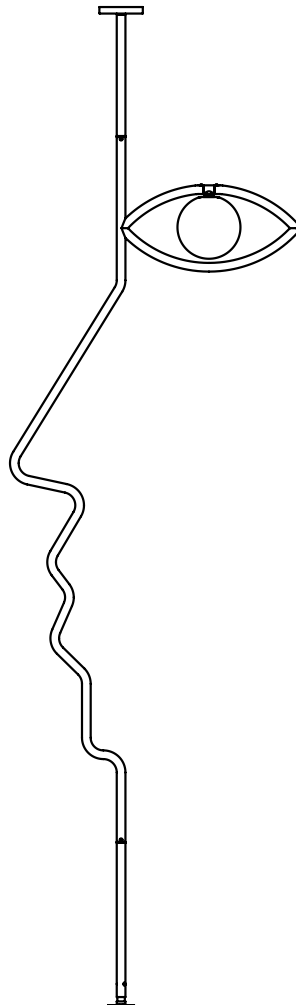



FACE LIGHT (PLUG-IN)

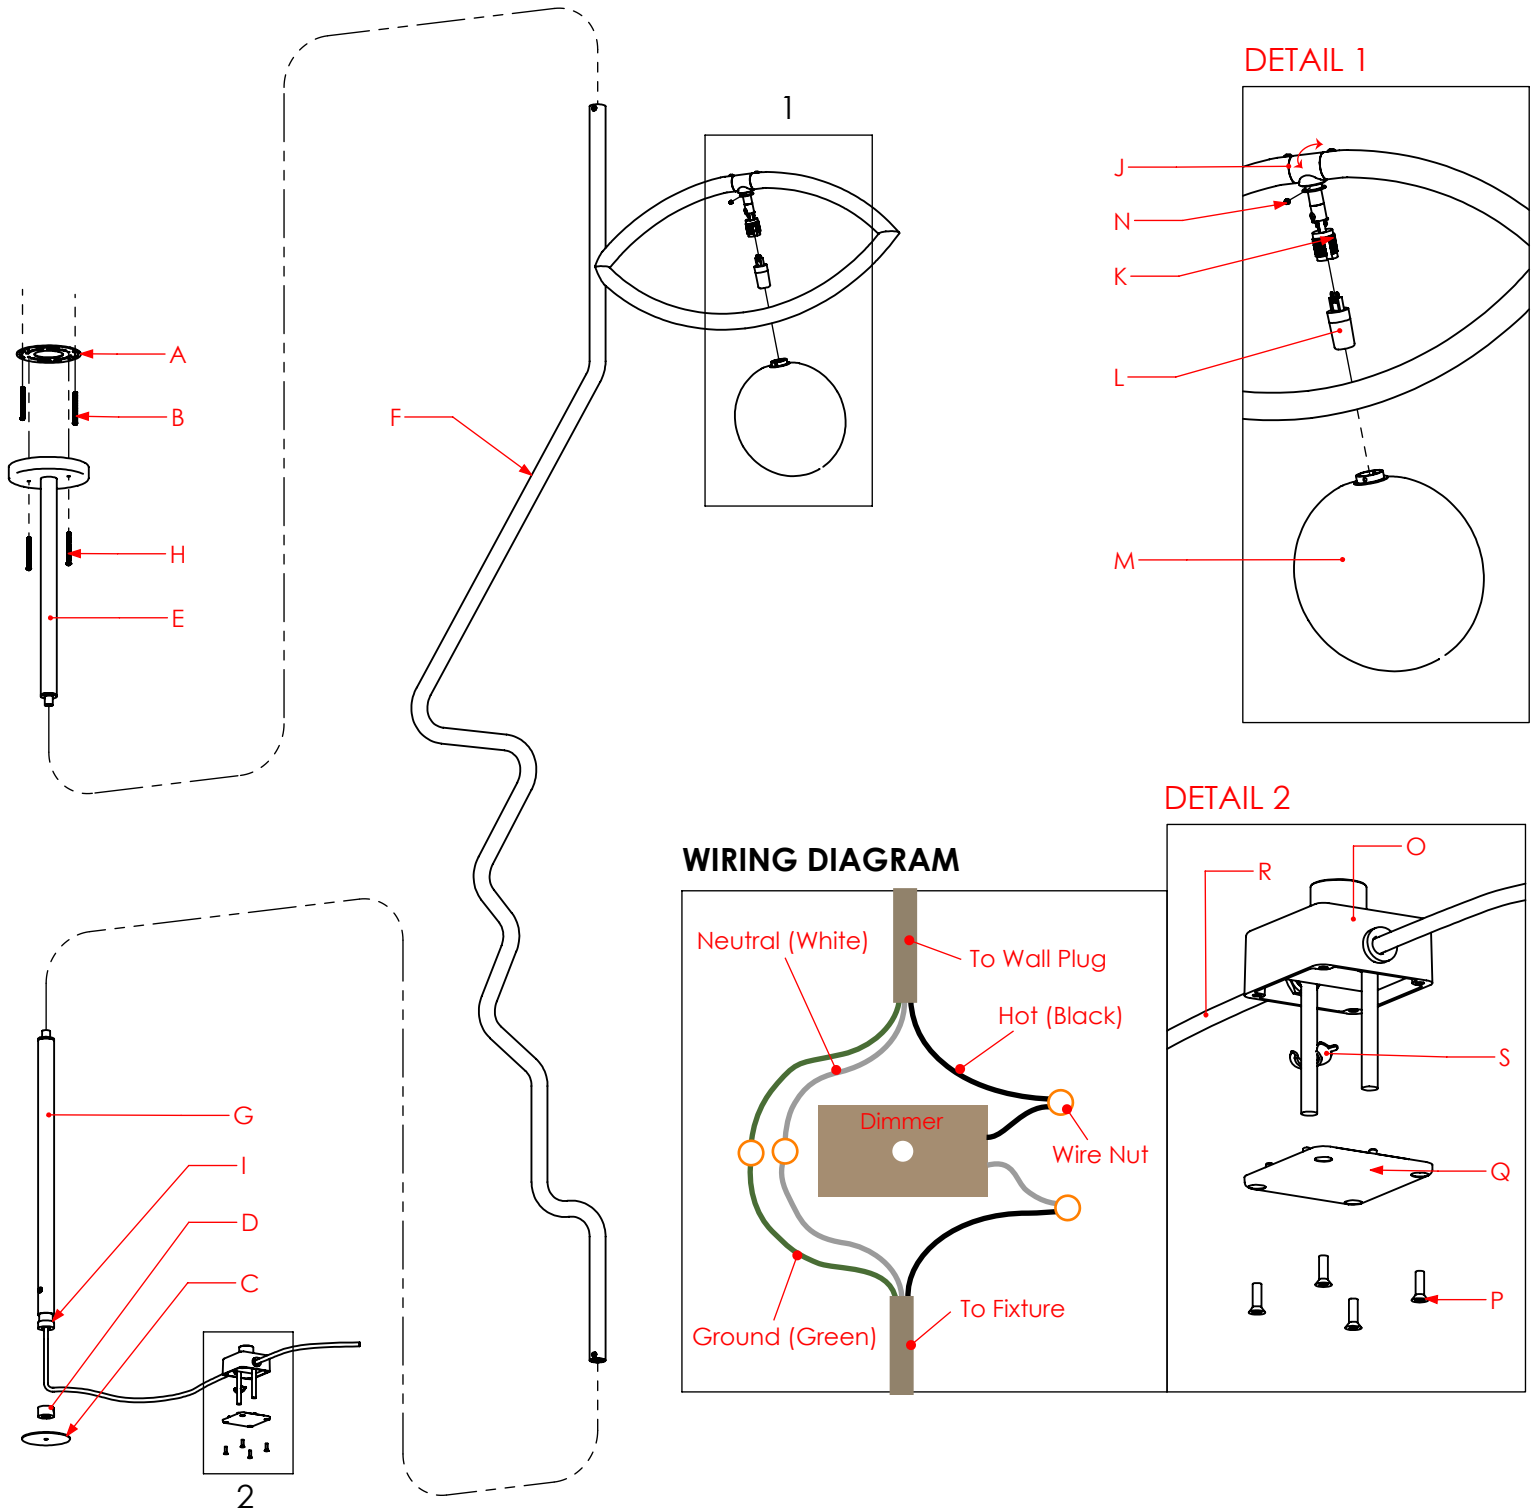



FACE LIGHT (PLUG-IN)

1. Attach bracket (A) to ceiling using appropriate anchor hardware (B, NOT INCLUDED).
2. Install floor plate (C) and cord exit coupling (D) directly below ceiling mount point, using appropriate anchor hardware (NOT INCLUDED). Use plumb or laser to make sure they are aligned properly. Ensure that the cord exit hole is facing in the desired direction.
3. Screw bottom end of section (E) into top end of fixture body (F).
4. Run cord through section (G), then screw into the bottom of fixture body (F).
6. Carefully move assembled fixture into vertical position on top of floor plate assembly until it keys into place.
7. Raise entire fixture up to meet ceiling bracket and attach canopy to bracket using finished screws (H). If necessary, drill holes in ceiling behind mating holes to receive the extra length of the finished screws. There should now be a small gap between the bottom of the fixture and the floor plate.
8. Grip extending foot (I) and unscrew counter-clockwise to lower it toward the floor. Keep unscrewing until bottom of tube mates firmly with floor plate (C) and cord is sitting in the hole on cord exit coupling. DO NOT OVERTIGHTEN.
9. Rotate tube segment (J) so that socket assembly (K) is clear of bottom of “eye”, then install bulb (L).
10. Slide glass (M) over bulb and socket assembly, then fasten in place with set screws (N).
11. Locate the dimmer and plug assembly (O), and remove the screws (P) and lid (Q) from the dimmer box to reveal wires inside.
10. Pass the cord coming from the fixture (R) through the open bushing in the dimmer box, then attach strain relief crimp (S) to cord where it is marked.
11. Splice the wires using included wire nuts, according to “WIRING DIAGRAM”, then re-assemble dimmer box, making sure all wires and attachments are properly seated.