



FINDINGS LIGHT

SAFETY INFORMATION


Please contact a licensed electrician. Only suitable for direct mounting to non-combustable surfaces. Under no circumstances can Anna Karlin lighting be mounted on normally flammable surfaces. Suitable for dry, indoor use only. Maximum ambient temperatures: 25°C

INSTALLATION OF THIS FIXTURE REQUIRES 2 PEOPLE.

DO NOT WIRE DIRECTLY TO LINE VOLTAGE. USE INCLUDED LED DRIVER.


LAMPING

2 × 12V G4 bulbs (max 25W, 4.5W LED bulb included), 2700K 12V hardwired LED module.

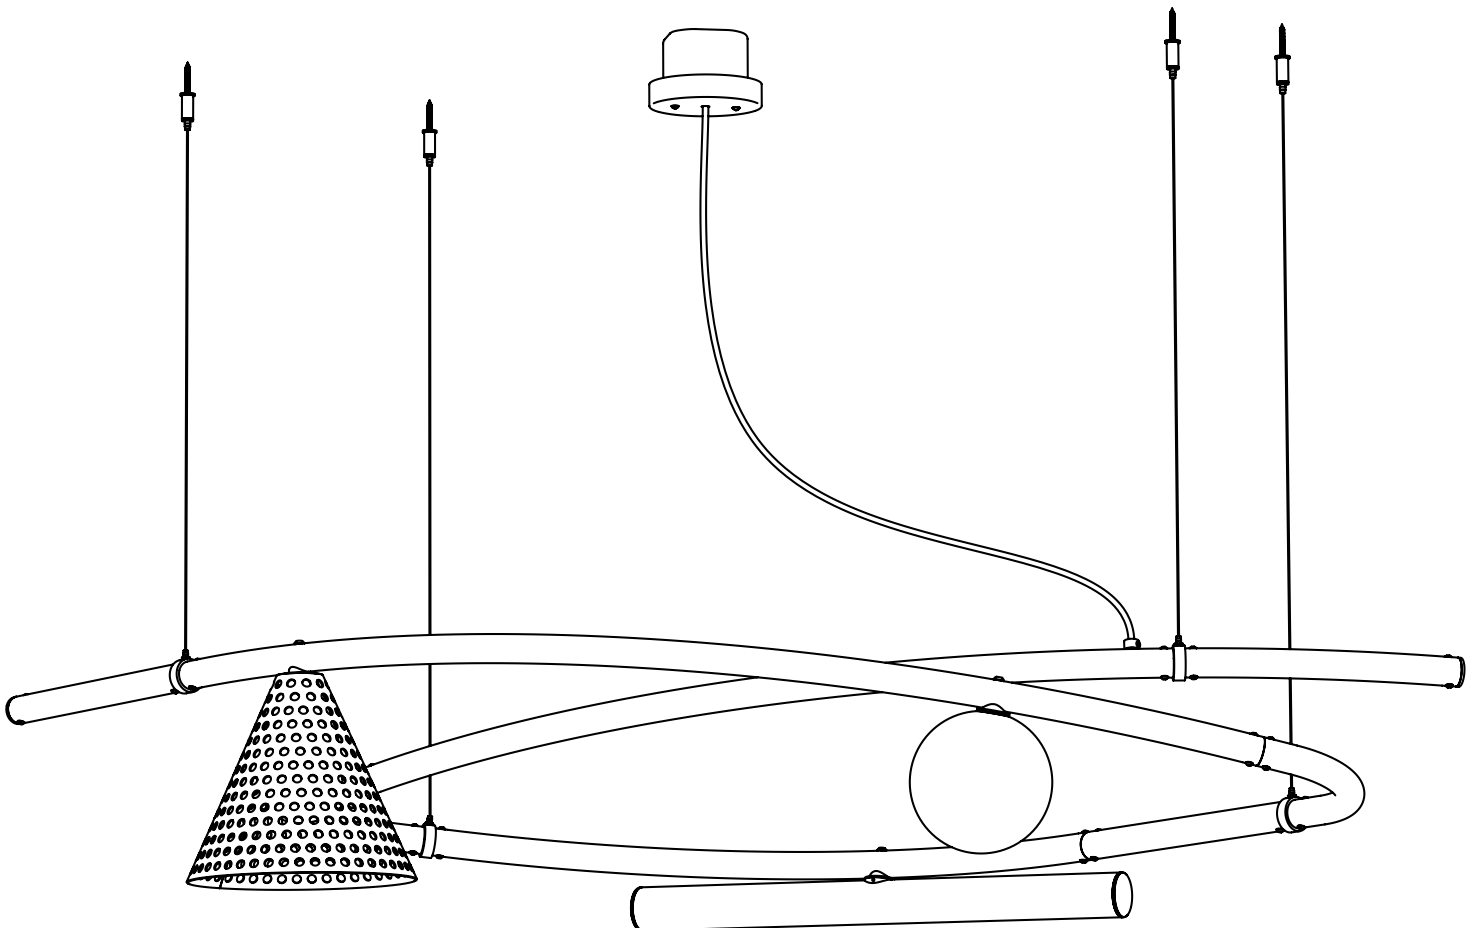



FINDINGS LIGHT

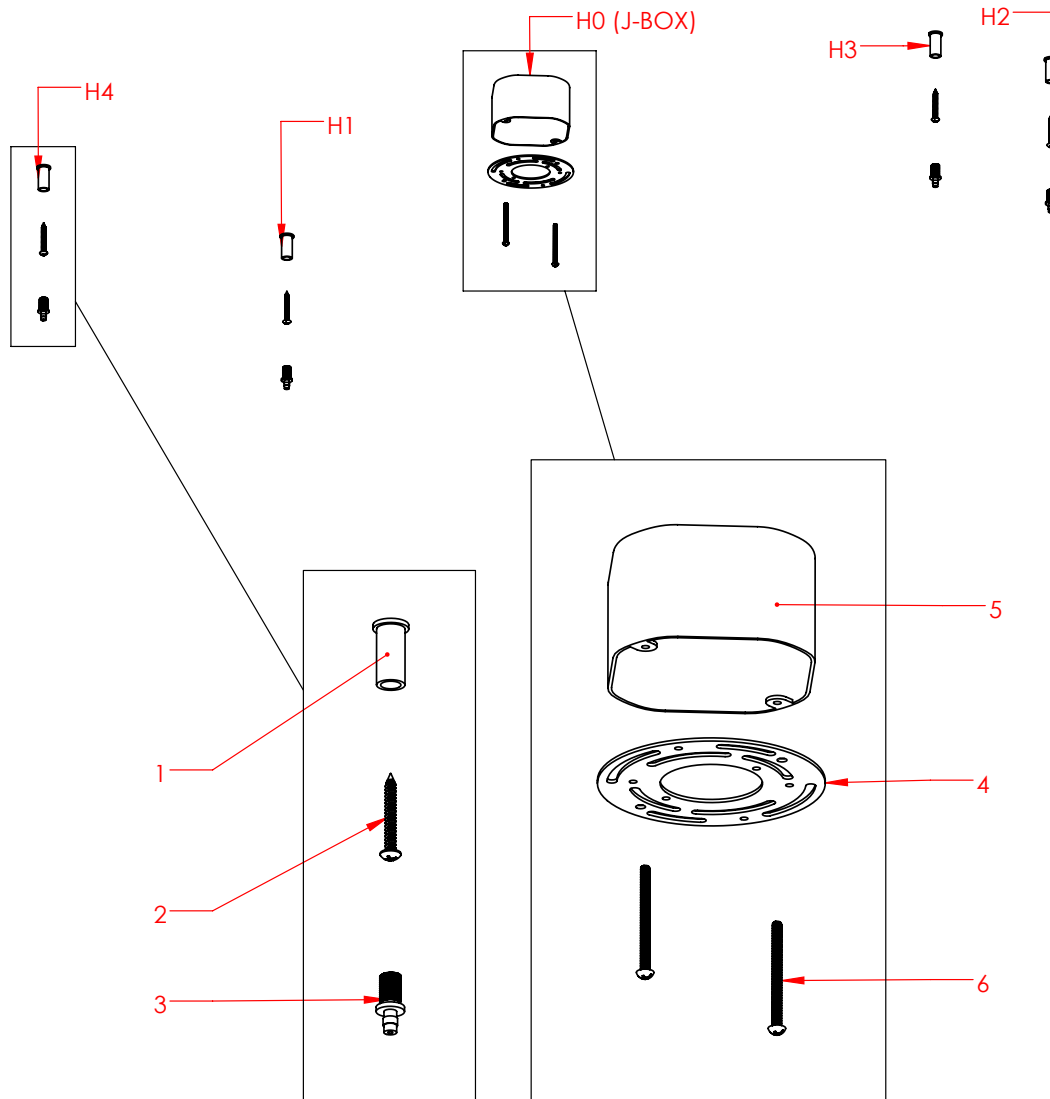


FOR HANGING POINT LOCATIONS, REFER TO THE DIAGRAM ON THE LAST PAGE OF THIS DOCUMENT, AS WELL AS INCLUDED FULL-SCALE TEMPLATE.

1. For H1 through H4, first install ceiling mount couplings (1) to ceiling using appropriate screws/anchors (2, not included). **To locate the hanging points, place the full-scale template on the floor below the desired fixture location, making sure the j-box is aligned with the existing j-box location. Then, use a plumb line or laser level to translate H1-H4 from the template on the floor up to the ceiling.**
2. Attach cable grippers (3) to couplings.
3. Install mounting bracket (4) to j-box (5) using included steel screws (6).




FINDINGS LIGHT

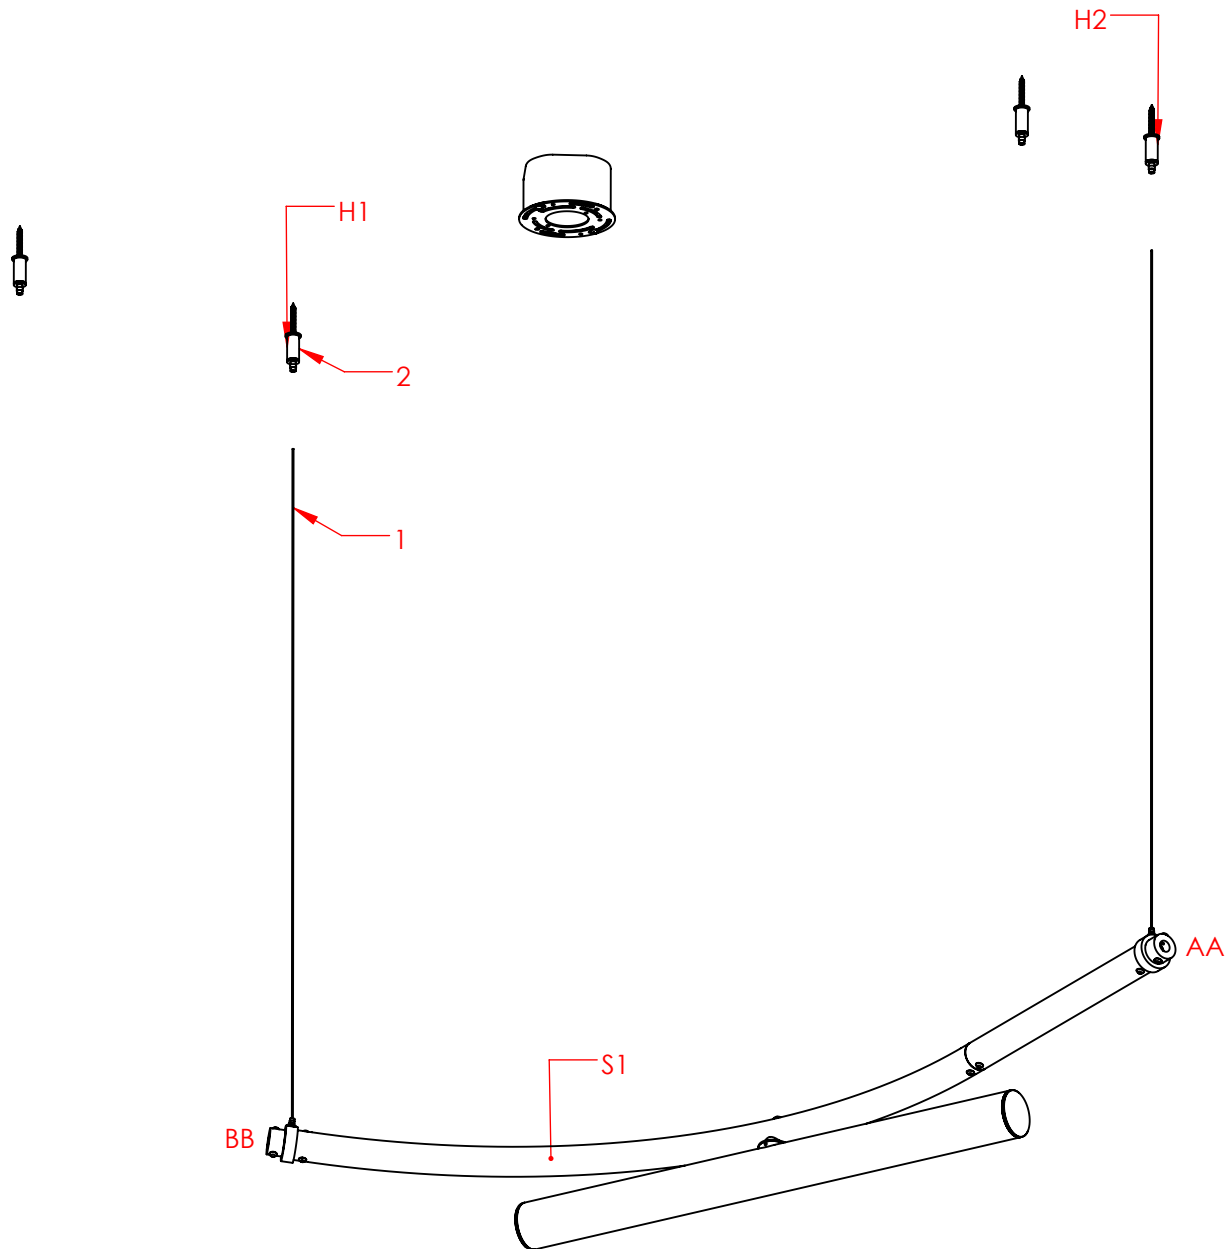

4. Locate the end of section S1 marked AA.
5. Remove safety nut from the end of the cable gripper (1) at point H1. Slide nut onto end of suspension cable (2), then insert cable into gripper until secure (approx. 1"). Slide safety nut back into place and tighten.
6. Repeat step 5 for section end BB and point H2.




FINDINGS LIGHT

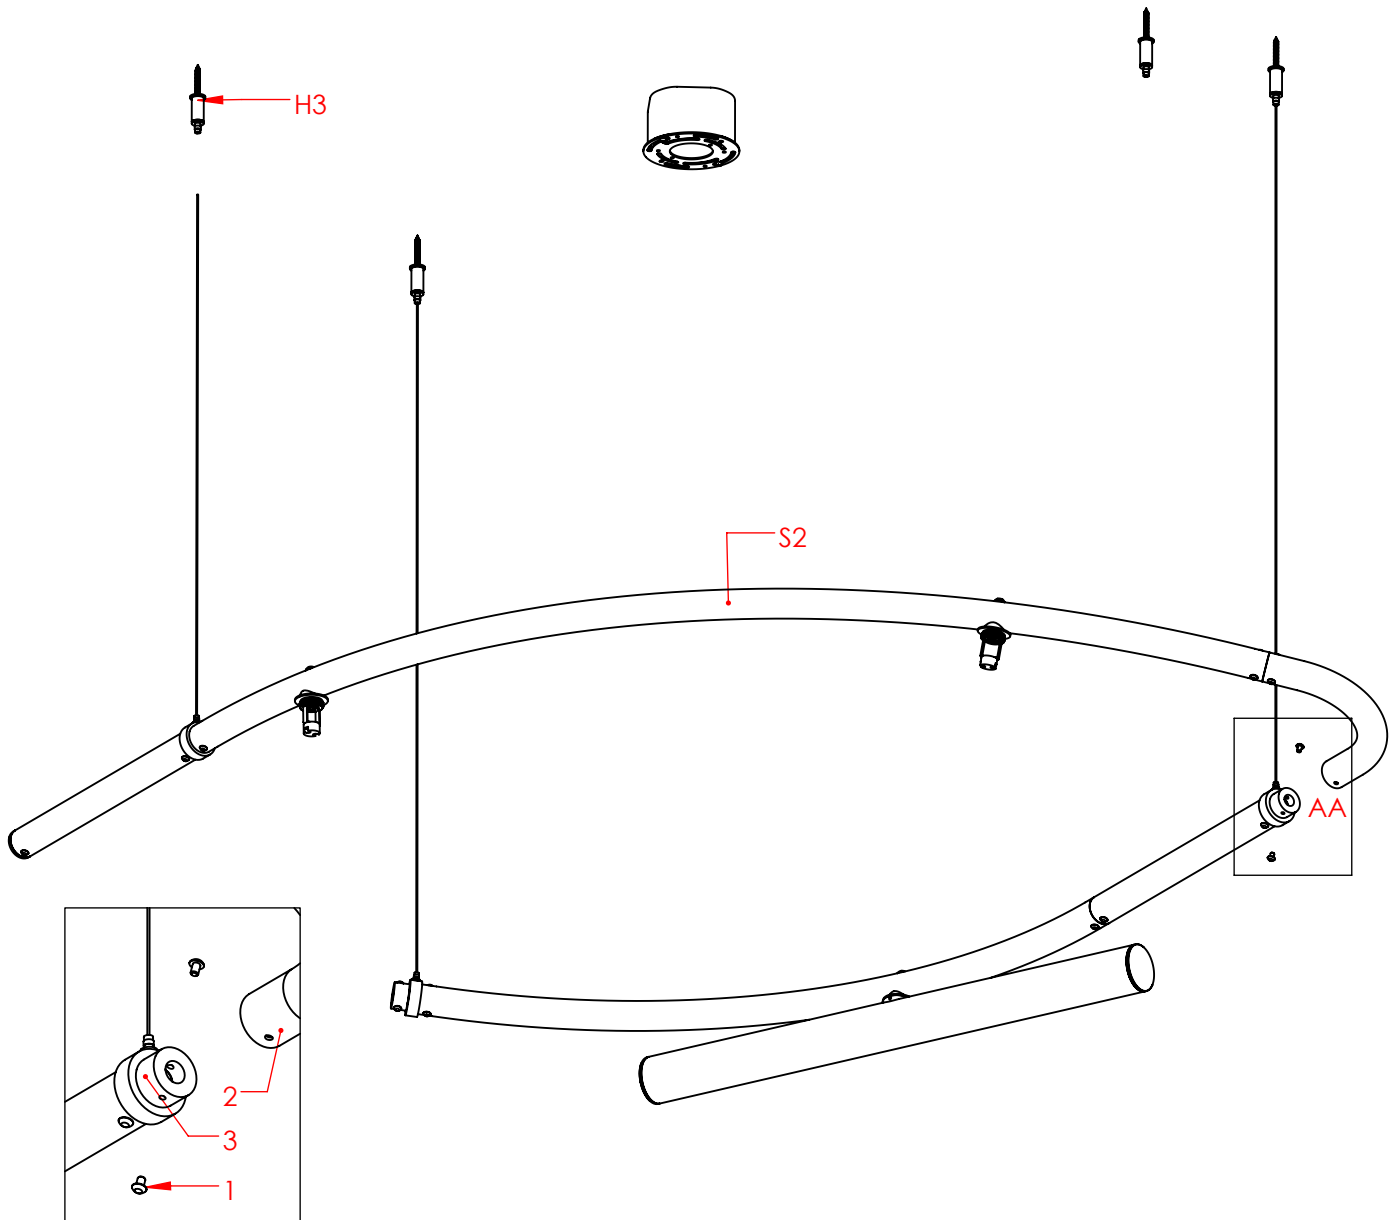

7. Locate the cable on section S2 and repeat step 5 to secure cable to point H3.
8. At joint AA, securely couple the black wire emerging from S1 with the black wire emerging from S2. Do the same for the white wires.
9. Remove the two socket head screws [1] from male end of joint [3]. Slide tube end [2] onto the joint, then replace screws. Make sure screws are fully tightened.




FINDINGS LIGHT

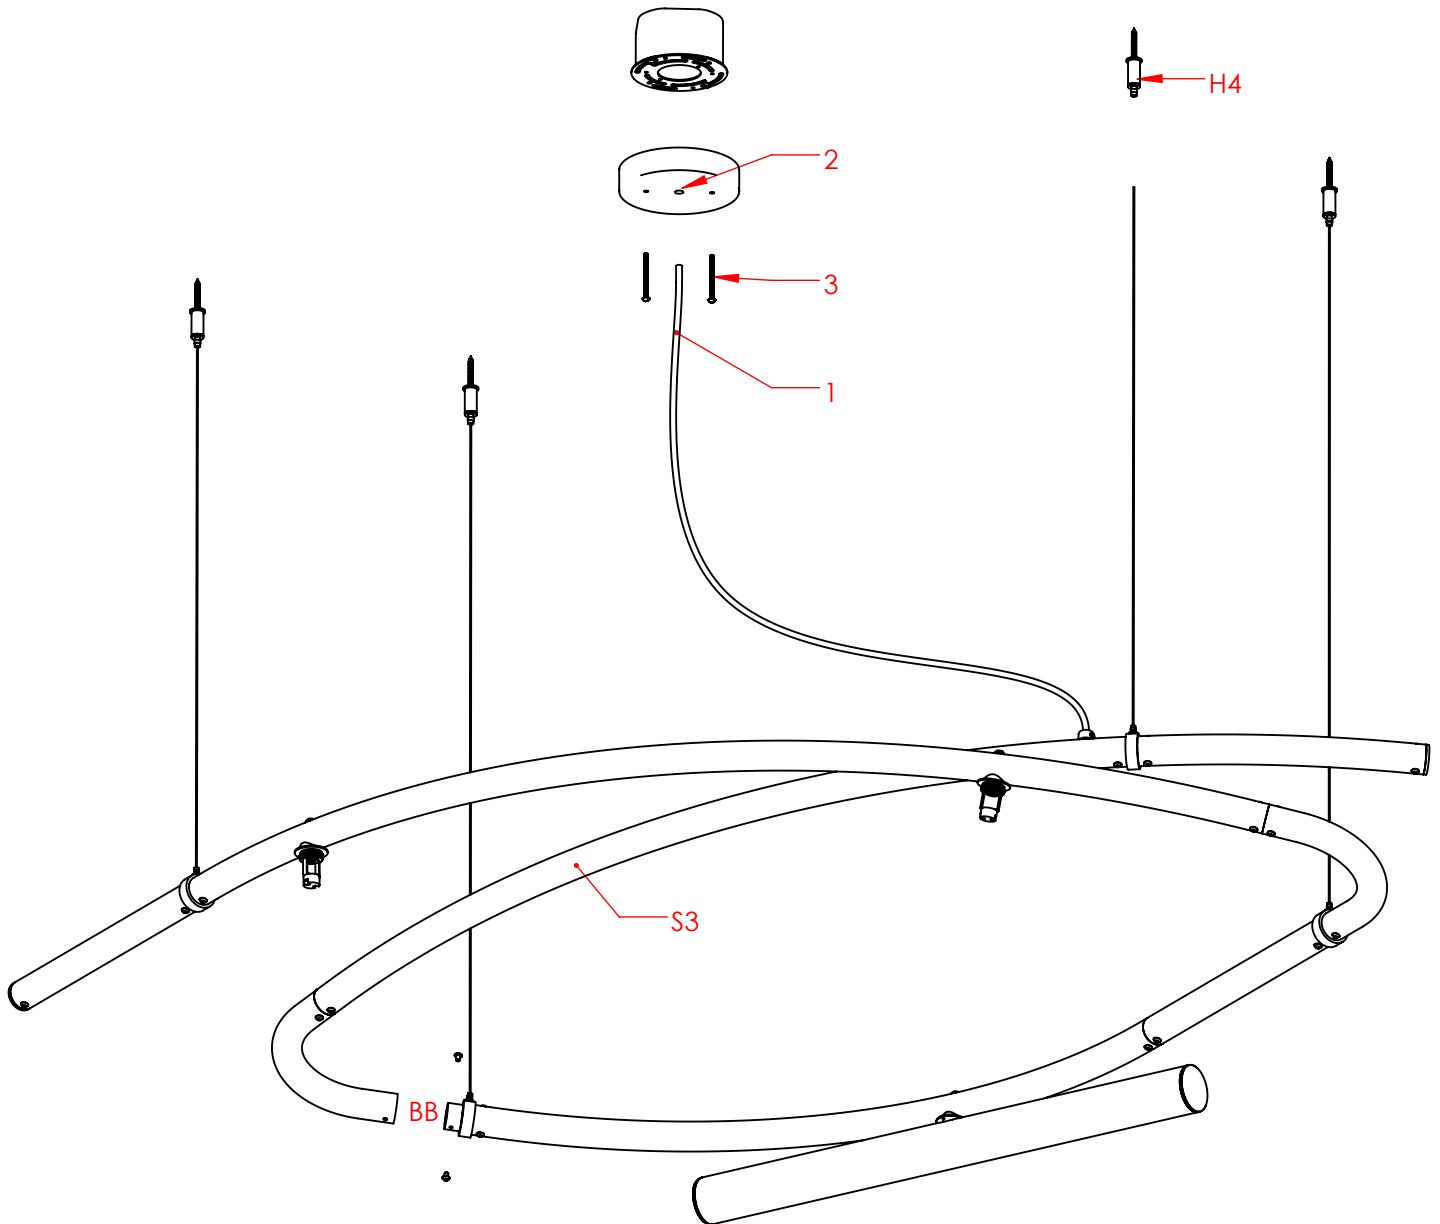

10. Locate the cable on section S3 and repeat step 5 to secure cable to point H3.
11. Feed power cable (1) through cord bushing (2) and splice wires to the positive and negative output wires of the LED driver. **BLACK WIRE IS POSITIVE, WHITE WIRE IS NEGATIVE.**
12. Attached canopy to mounting bracket using included finished screws (3).
13. At joint BB, securely couple the black wire emerging from S1 with the black wire emerging from S3. Do the same for the white wires.
14. Remove socket head screws from joint end, then slide tube end onto joint and replace screws. Make sure screws are fully tightened.



FINDINGS LIGHT

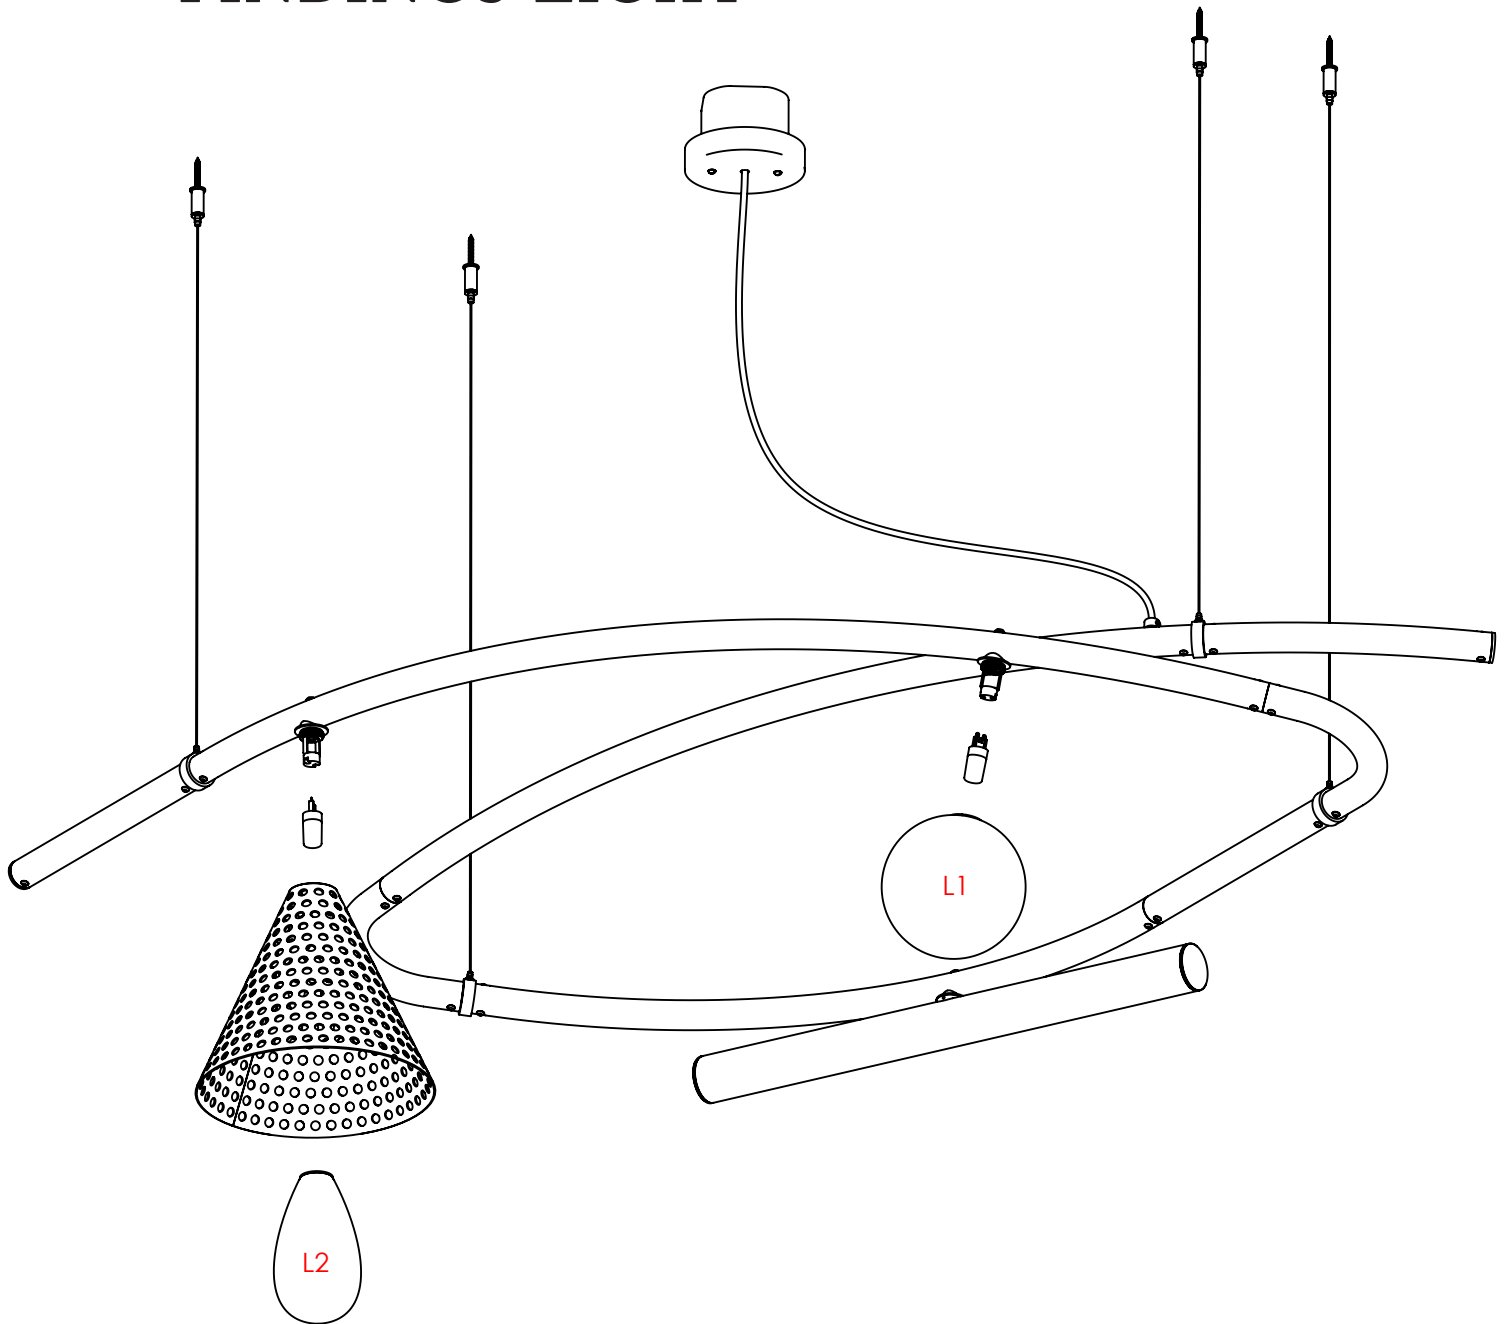

15. Install included G4 LED bulbs into sockets.
16. Locate socket L1 and round glass globe. Screw globe neck onto socket collar.
17. Locate socket L1, perforated metal shade, and teardrop glass. Slide cone onto socket collar, then screw teardrop neck onto collar, pinning the shade in place as shown.

