



SKETCH - VERTICAL



SAFETY INFORMATION

Please contact a licensed electrician. Only suitable for direct mounting to non-combustable surfaces. Under no circumstances can Anna Karlin lighting be mounted on normally flammable surfaces. Suitable for dry, indoor use only. Maximum ambient temperatures: 25°C

INSTALLATION OF THIS FIXTURE REQUIRES 2 PEOPLE.


LAMPING

8× G9 bulbs (max 25W, 4.5W LED bulb included).

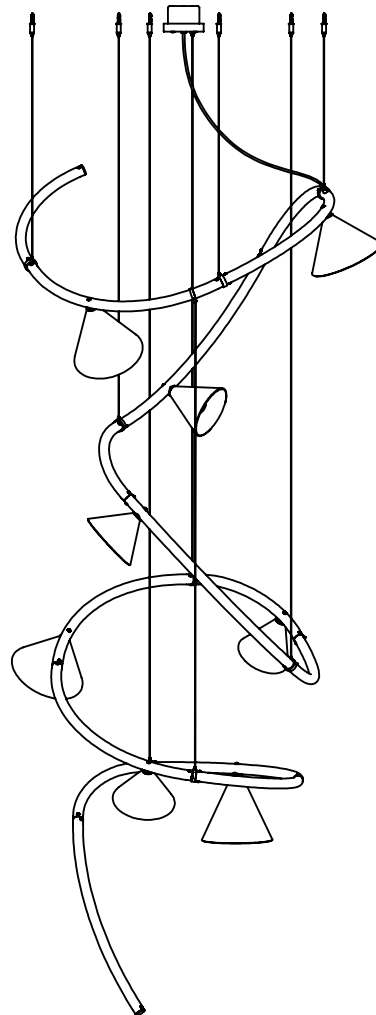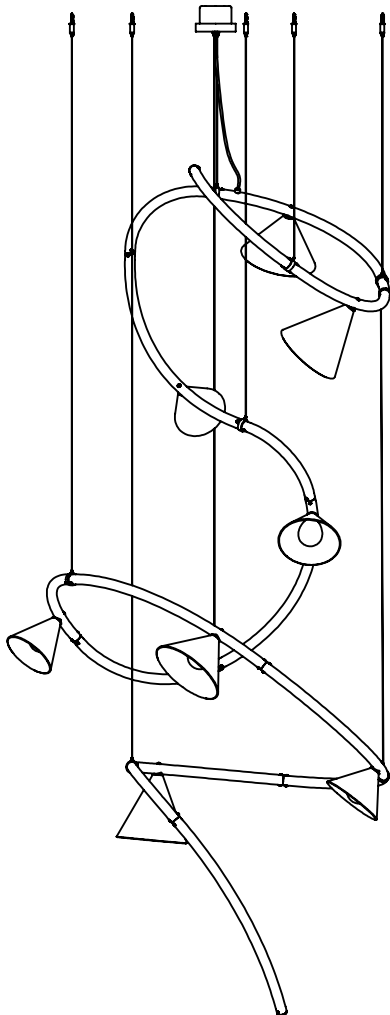



SKETCH - VERTICAL

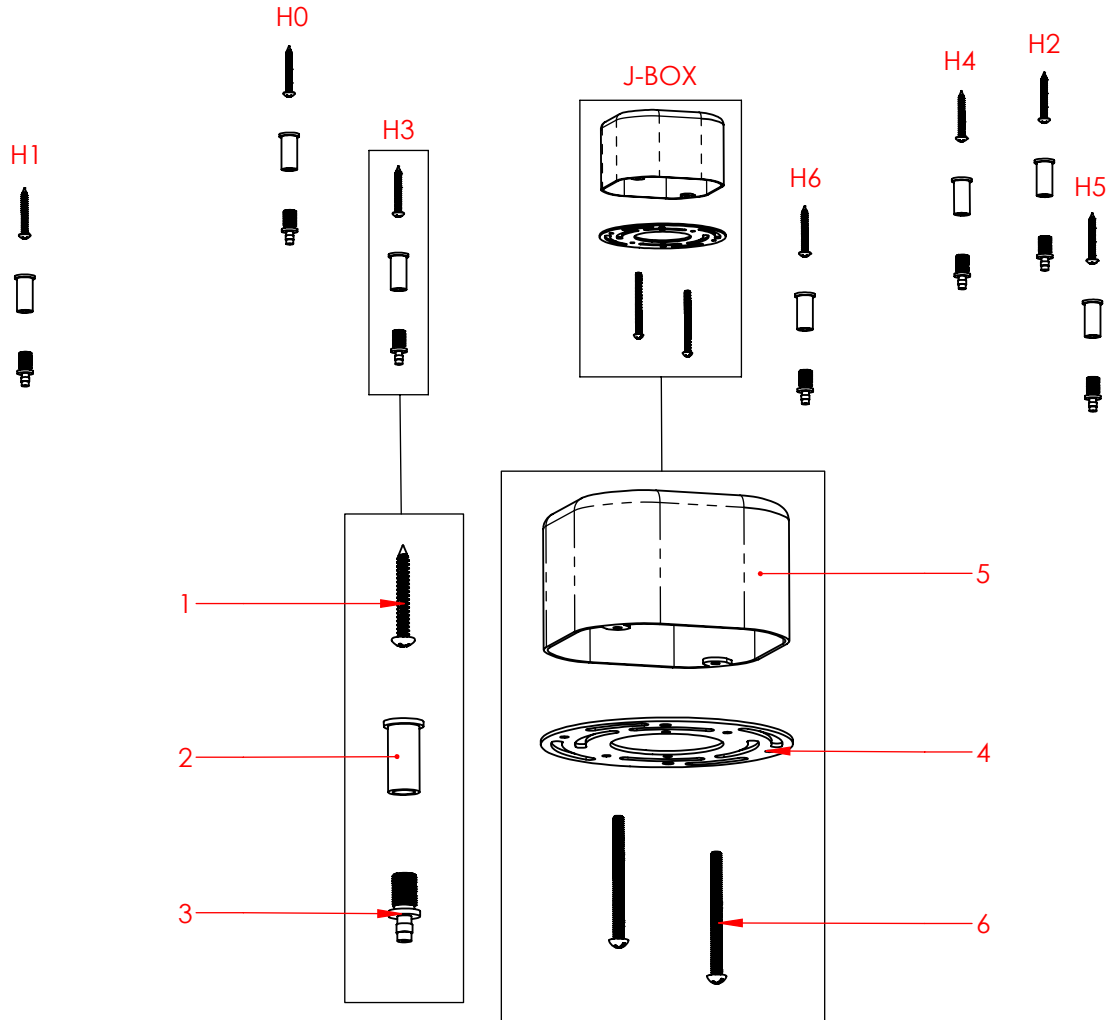

FOR HANGING POINT LOCATIONS, REFER TO THE INCLUDED FULL-SCALE TEMPLATE.


To locate the hanging points, place the full-scale template on the floor below the desired fixture location, making sure the j-box is aligned with the existing j-box location. Then, use a plumb line or laser level to translate H0-H6 from the template on the floor up to the ceiling.

CABLES ARE ALL PRE-CUT TO LENGTH FOR THE SPECIFIED DROP HEIGHT. DO NOT ATTEMPT TO ADJUST THE CABLE LENGTHS.

1. For H0 through H6, first install ceiling mount couplings (1) to ceiling using appropriate screws/anchors (2, not included).
2. Attach cable grippers (3) to couplings.
3. Install mounting bracket (4) to j-box (5) using included steel screws (6).



SKETCH - VERTICAL

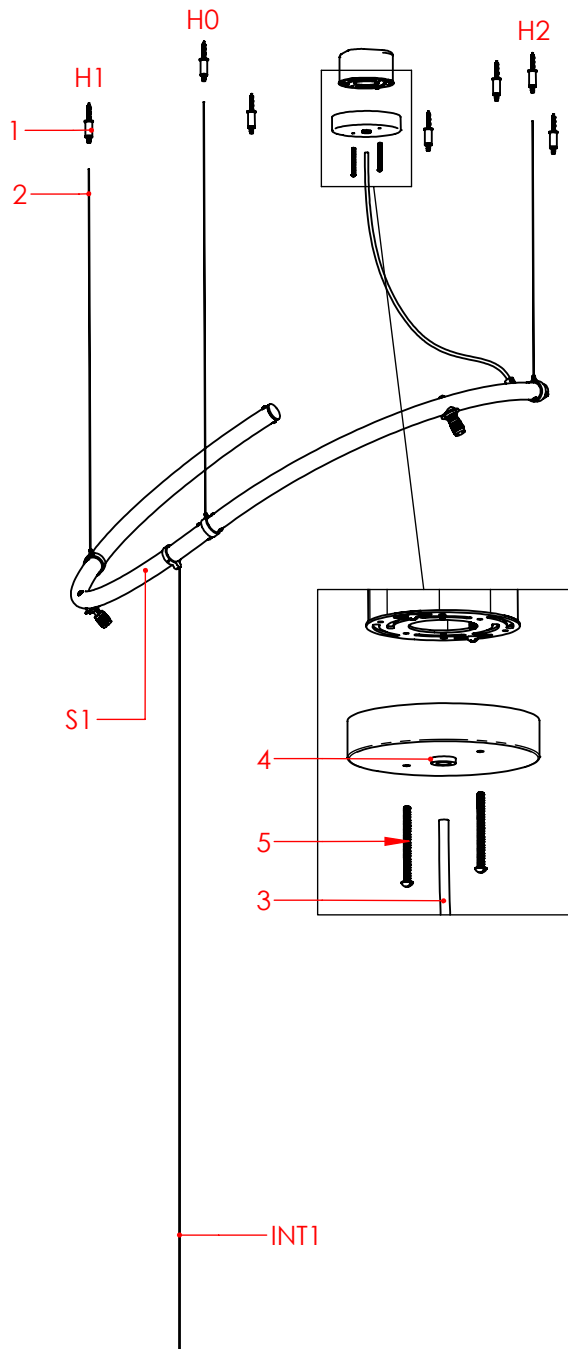

4. Locate section S1. **LEAVE CABLE (INT1) ROLLED UP UNTIL STEP 15, ON PAGE 6, TO AVOID TANGLING.**

5. Remove safety nut from the end of the cable gripper (1) at point H1. Slide nut onto end of suspension cable (2), then insert cable H1 on segment into gripper H1 until secure (approx. 1"). Slide safety nut back into place and tighten.


6. Repeat step 5 for points H0 and H2.

7. Feed power cable (3) through cord bushing (4) and splice wires to those in the j-box.

8. Attached canopy to mounting bracket using included finished screws (5).



SKETCH - VERTICAL

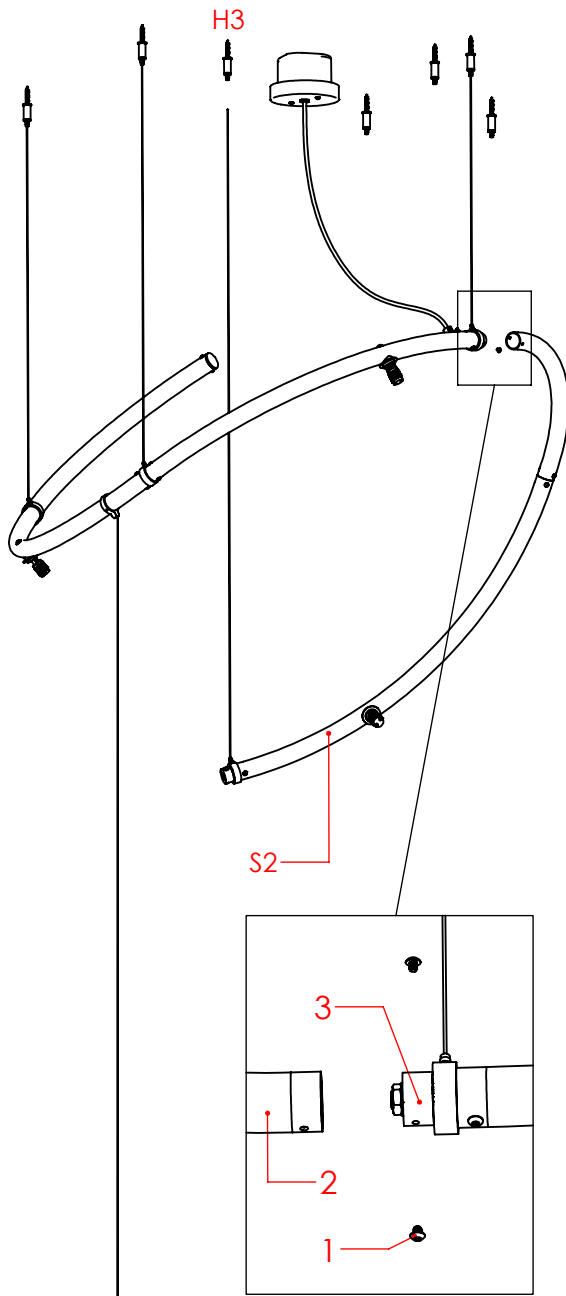


9. Locate the hanging cable on section S2 and repeat step 5 to secure cable to point H3.

10. Pair the open end of S2 with the joint at the end of S1, then securely couple the black wire emerging from S1 with the black wire emerging from S2. Do the same for the white wires.

11. Remove the two socket head screws (1) from male end of joint (3). Slide tube end (2) onto the joint, then replace screws. Make sure screws are fully tightened.




SKETCH - VERTICAL

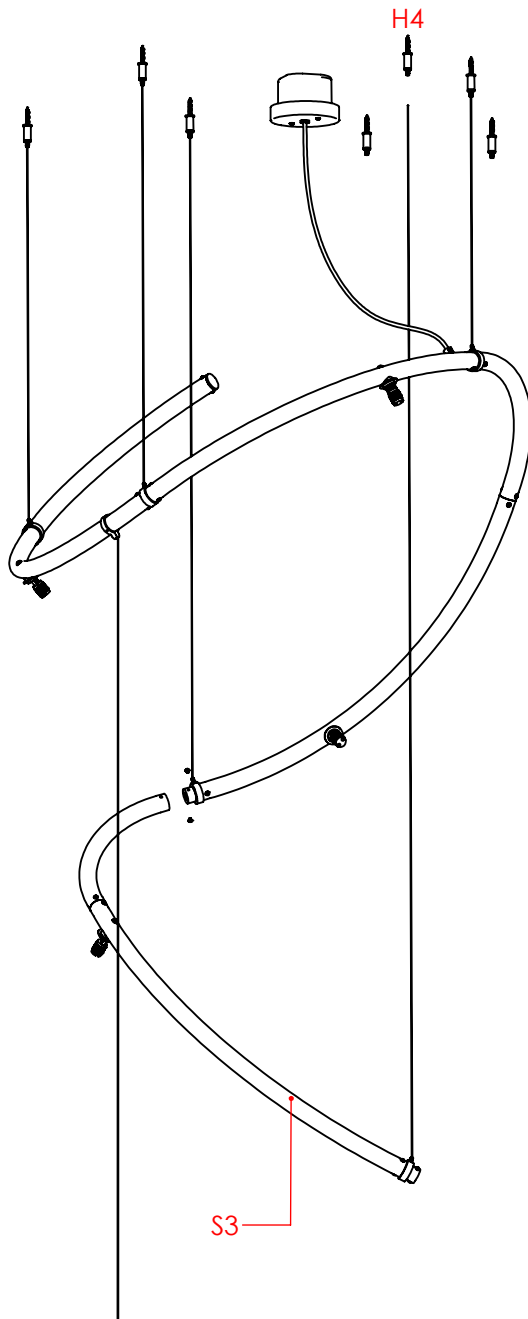

12. Locate the hanging cable on section S3 and repeat step 5 to secure cable to point H4.
13. Pair the open end of S3 with the joint at the end of S2, then securely couple the black wire emerging from S2 with the black wire emerging from S3. Do the same for the white wires.
14. Remove socket head screws from joint end, then slide tube end onto joint and replace screws. Make sure screws are fully tightened.



SKETCH - VERTICAL

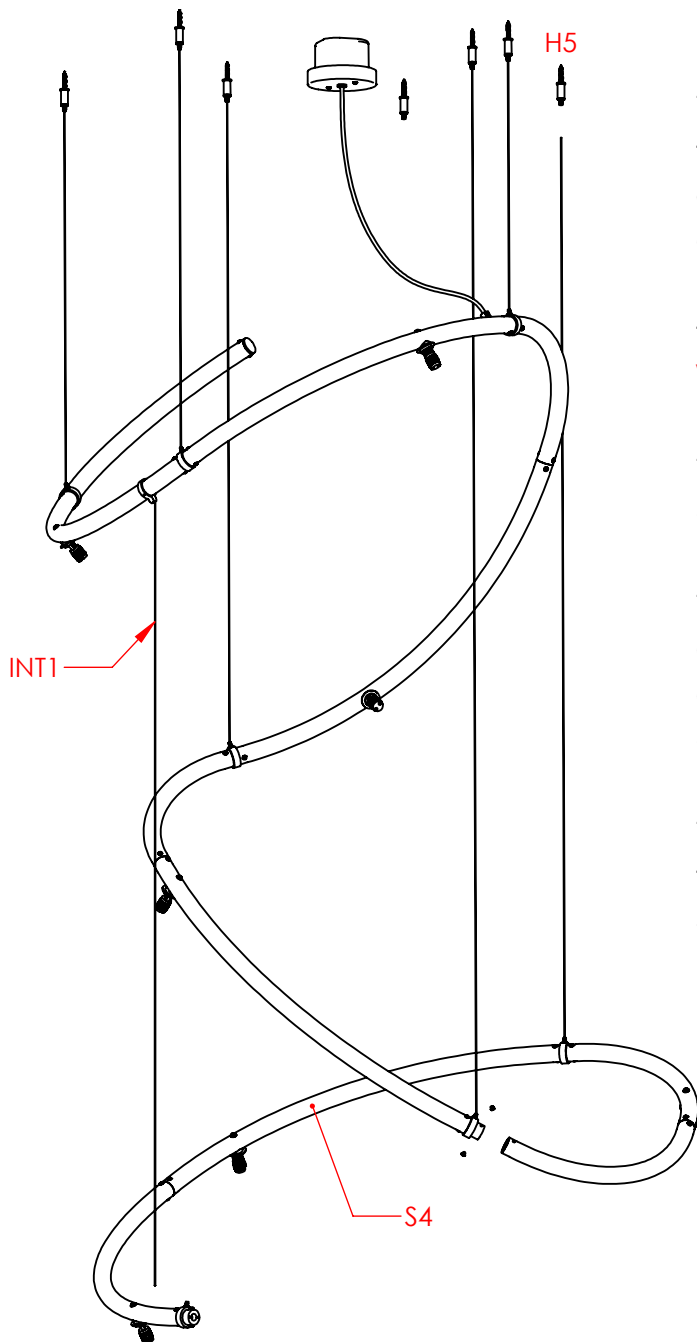

15. Unroll cable INT1. Remove safety nut from the end of the cable gripper on the joint at the end of S4. Slide nut onto dangling end of suspension cable, then insert cable INT1 into gripper until secure (approx. 1/2"). Slide safety nut back into place and tighten. **THIS IS A TIGHT CLEARANCE HOLE, SO BE VERY CAREFUL NOT TO FRAY THE CABLE.**


16. Locate the hanging cable at center of section S4 and repeat step 5 to secure cable to point H5.

17. Pair the open end of S4 with the joint at the end of S3, then securely couple the black wire emerging from S3 with the black wire emerging from S4. Do the same for the white wires.

18. Remove socket head screws from joint end, then slide tube end onto joint and replace screws. Make sure screws are fully tightened.




SKETCH - VERTICAL

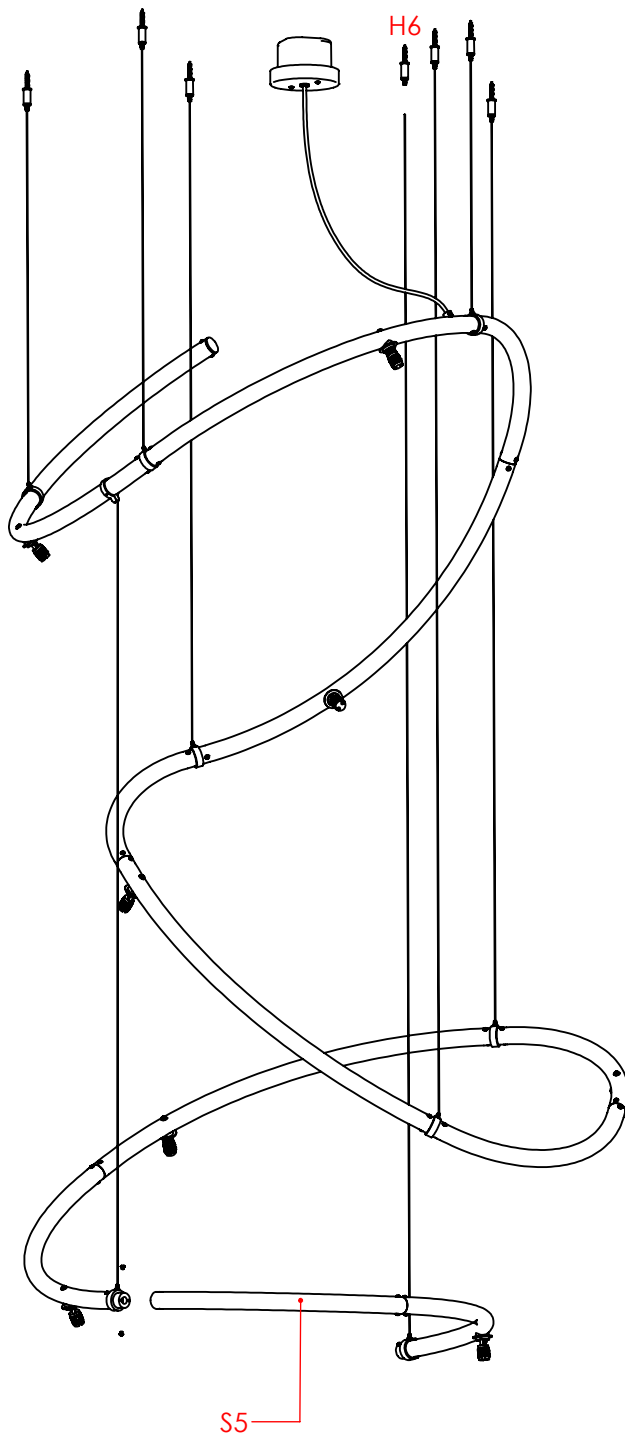

19. Locate the hanging cable on section S5 and repeat step 5 to secure cable to point H6.
20. Pair the open end of S5 with the joint at the end of S4, then securely couple the black wire emerging from S4 with the black wire emerging from S5. Do the same for the white wires.
21. Remove socket head screws from joint end, then slide tube end onto joint and replace screws. Make sure screws are fully tightened.




SKETCH - VERTICAL

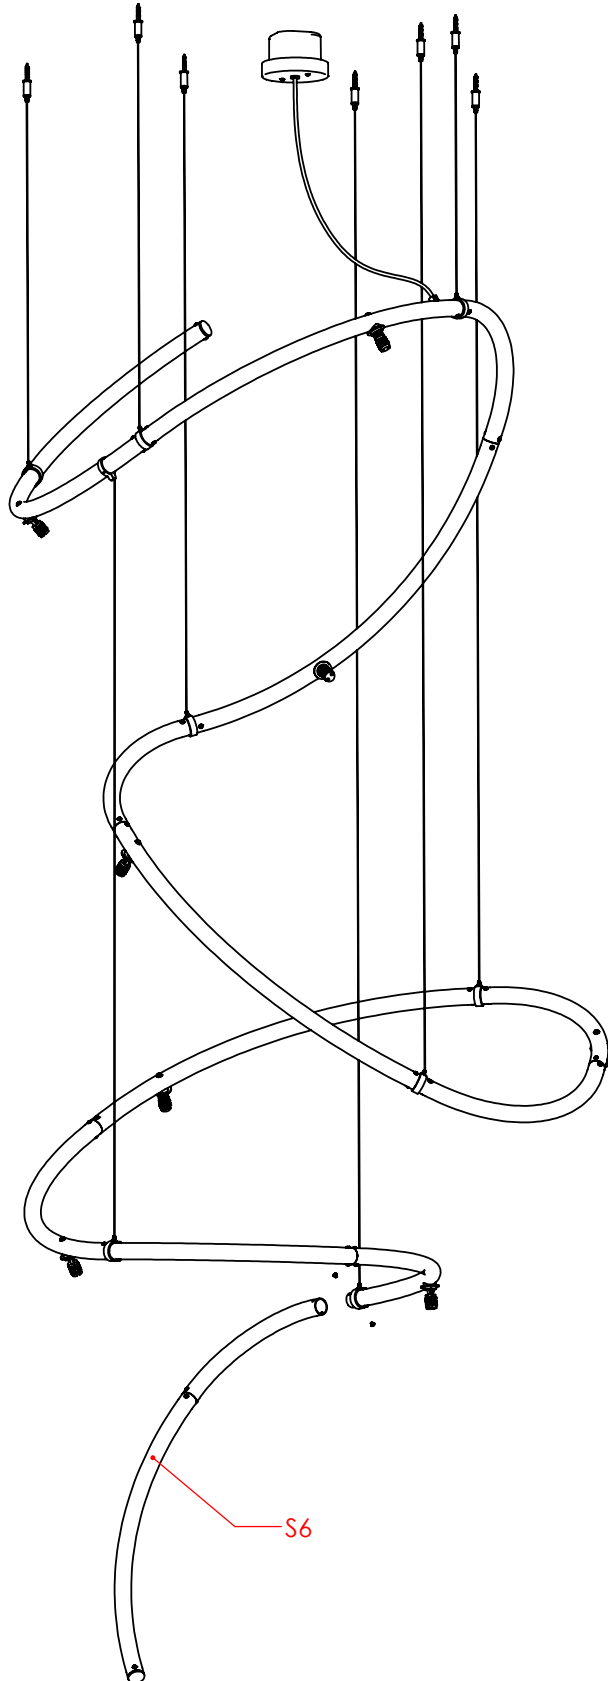

22. At joint and of S5, remove socket head screws from joint end, then slide open end of section S6 onto joint and replace screws. Make sure screws are fully tightened.



SKETCH - VERTICAL

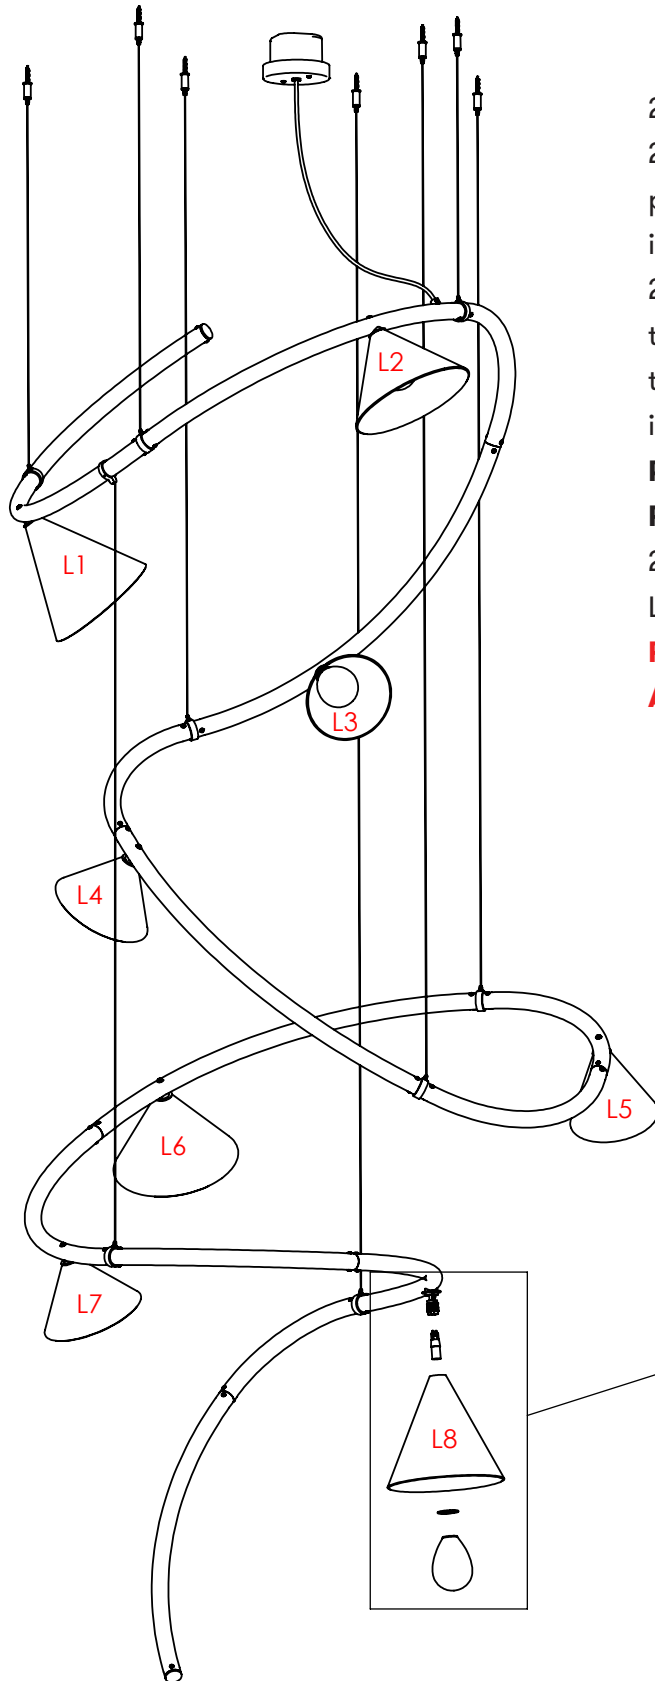

23. Install included G9 LED bulbs into sockets.
24. Locate socket L1 and shade assembly L1. Slide porcelain shade over bulb and socket until it is resting on the silicone gasket.
25. While holding porcelain shade in position, take glass globe/collar assembly L1 and screw it onto the external threads of the socket until the shade is held securely in place. **DO NOT OVERTIGHTEN. PORCELAIN WILL CRACK UNDER EXCESSIVE FORCE.**
26. Repeat steps 24 and 25 for shade assemblies L2 through L8. **THE SHADES ARE NUMBERED 1-8 FROM THE TOP OF THE FIXTURE TO THE BOTTOM, ALONG THE LENGTH OF THE CURVED TUBE SPINE.**

