



SKETCH - LARGE


SAFETY INFORMATION

Please contact a licensed electrician. Only suitable for direct mounting to non-combustable surfaces. Under no circumstances can Anna Karlin lighting be mounted on normally flammable surfaces. Suitable for dry, indoor use only. Maximum ambient temperatures: 25°C

INSTALLATION OF THIS FIXTURE REQUIRES 2 PEOPLE.


LAMPING

6× G9 bulbs (max 25W, 4.5W LED bulb included).

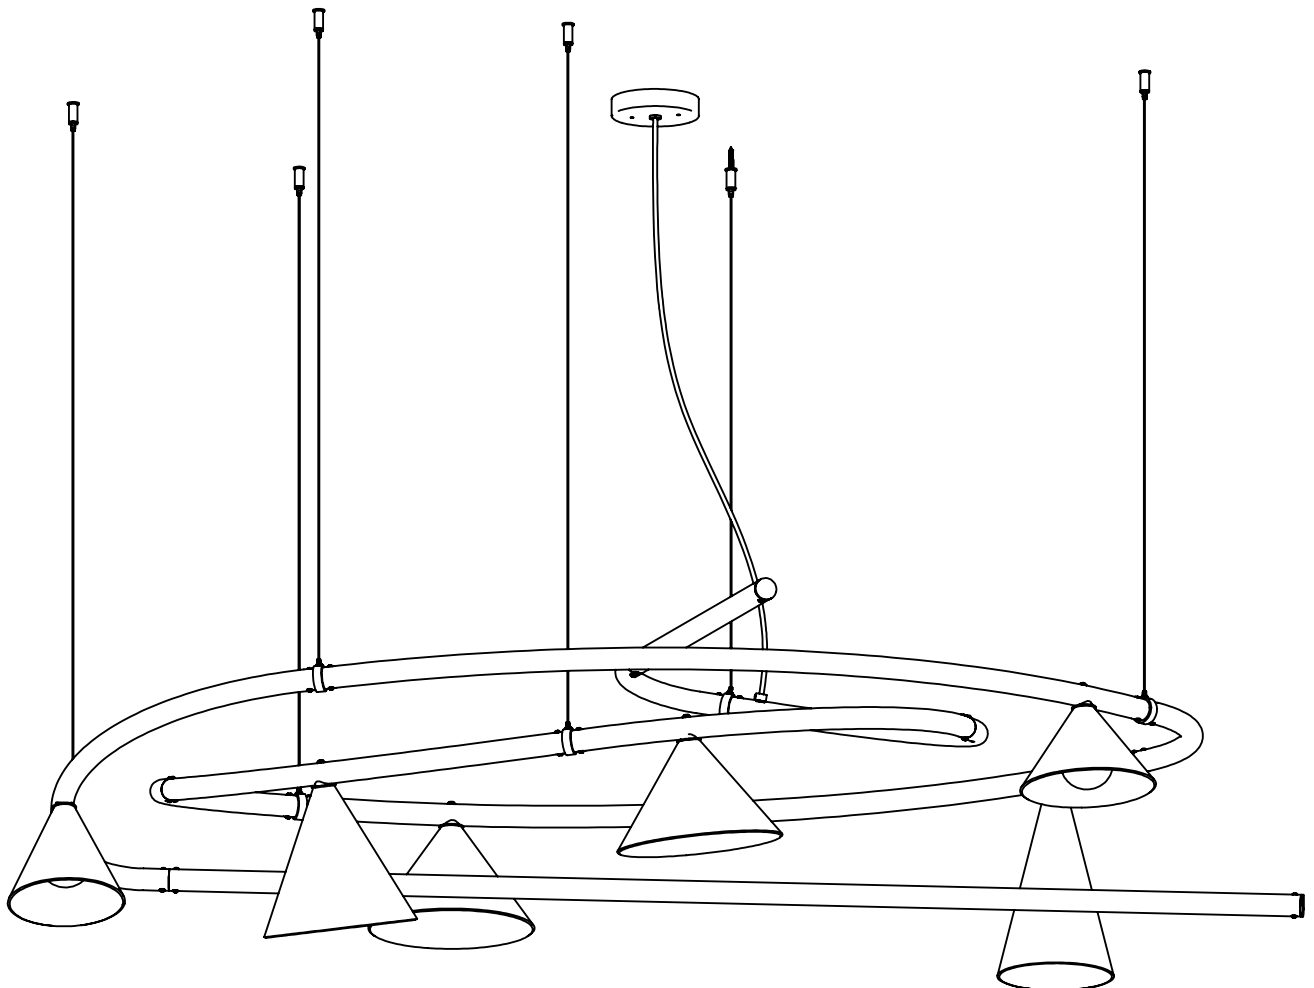



SKETCH - LARGE

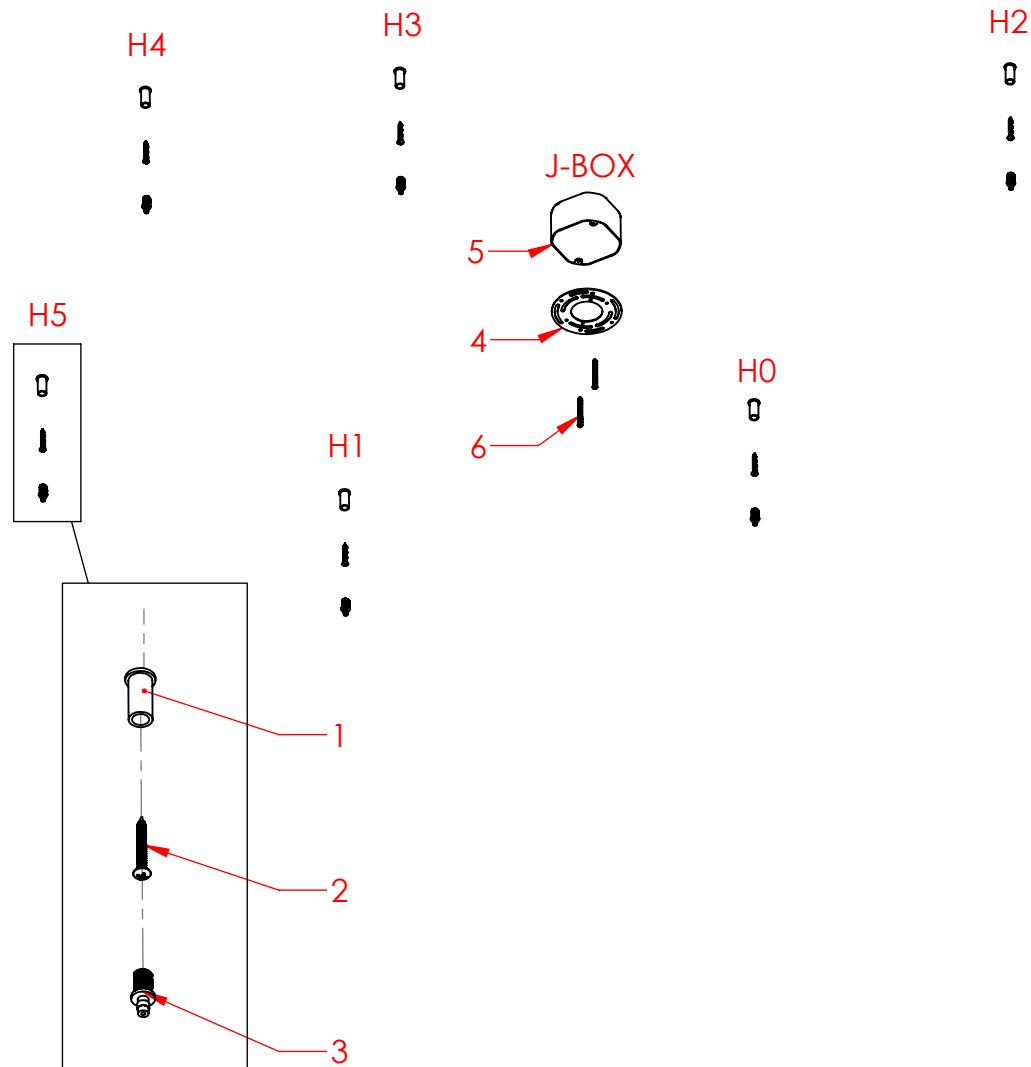


FOR HANGING POINT LOCATIONS, REFER TO THE DIAGRAM ON THE LAST PAGE OF THIS DOCUMENT, AS WELL AS INCLUDED FULL-SCALE TEMPLATE.

CABLES ARE ALL PRE-CUT TO LENGTH FOR THE SPECIFIED DROP HEIGHT. DO NOT ATTEMPT TO ADJUST THE CABLE LENGTHS.

1. For H0 through H5, first install ceiling mount couplings (1) to ceiling using appropriate screws/anchors (2, not included). **To locate the hanging points, place the full-scale template on the floor below the desired fixture location, making sure the j-box is aligned with the existing j-box location. Then, use a plumb line or laser level to translate H0-H5 from the template on the floor up to the ceiling.**
2. Attach cable grippers (3) to couplings.
3. Install mounting bracket (4) to j-box (5) using included steel screws (6).




SKETCH - LARGE

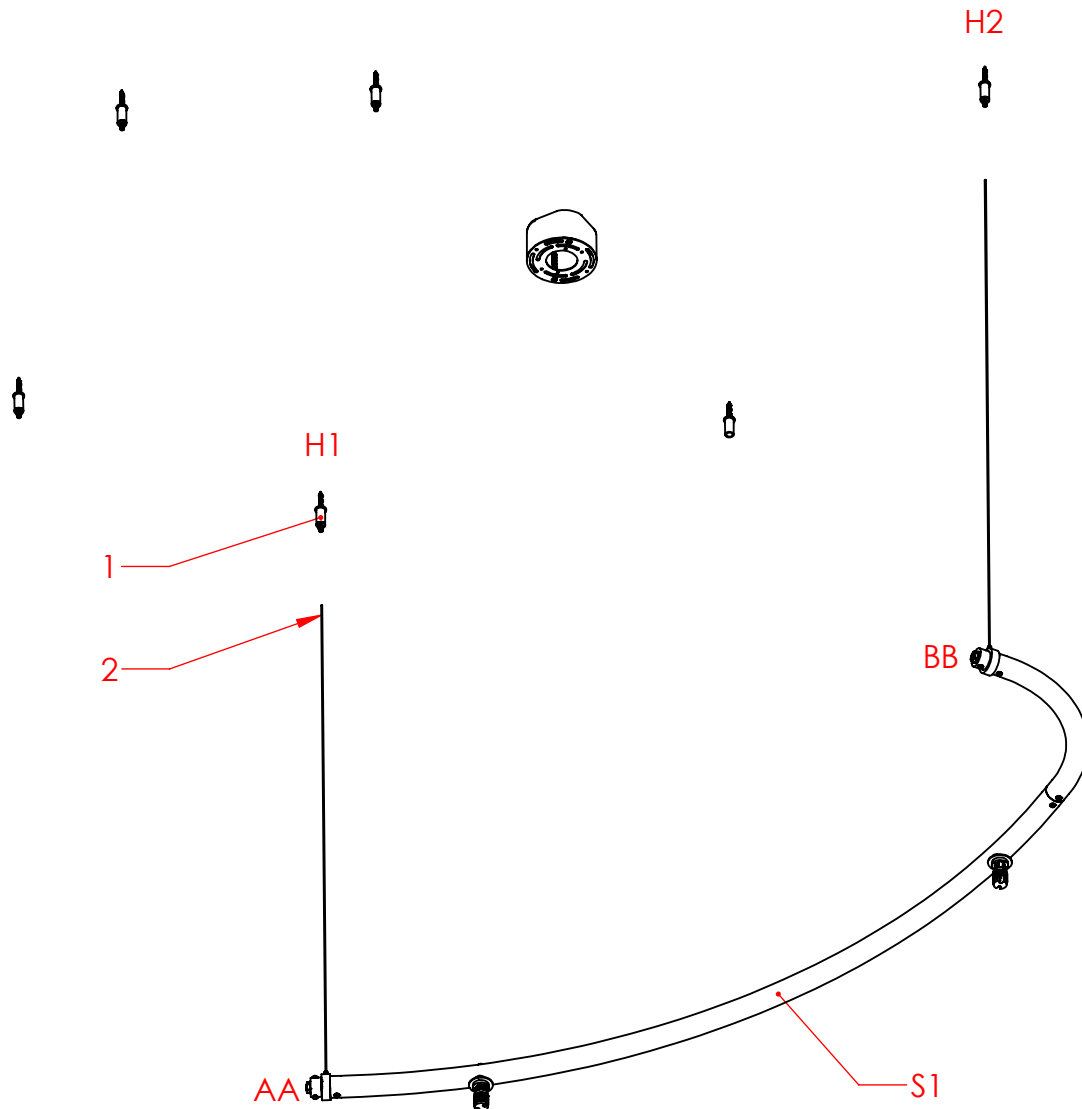

4. Locate the end of section S1 marked AA.
5. Remove safety nut from the end of the cable gripper (1) at point H1. Slide nut onto end of suspension cable (2), then insert cable into gripper until secure (approx. 1"). Slide safety nut back into place and tighten.
6. Repeat step 5 for section end BB and point H2.




SKETCH - LARGE

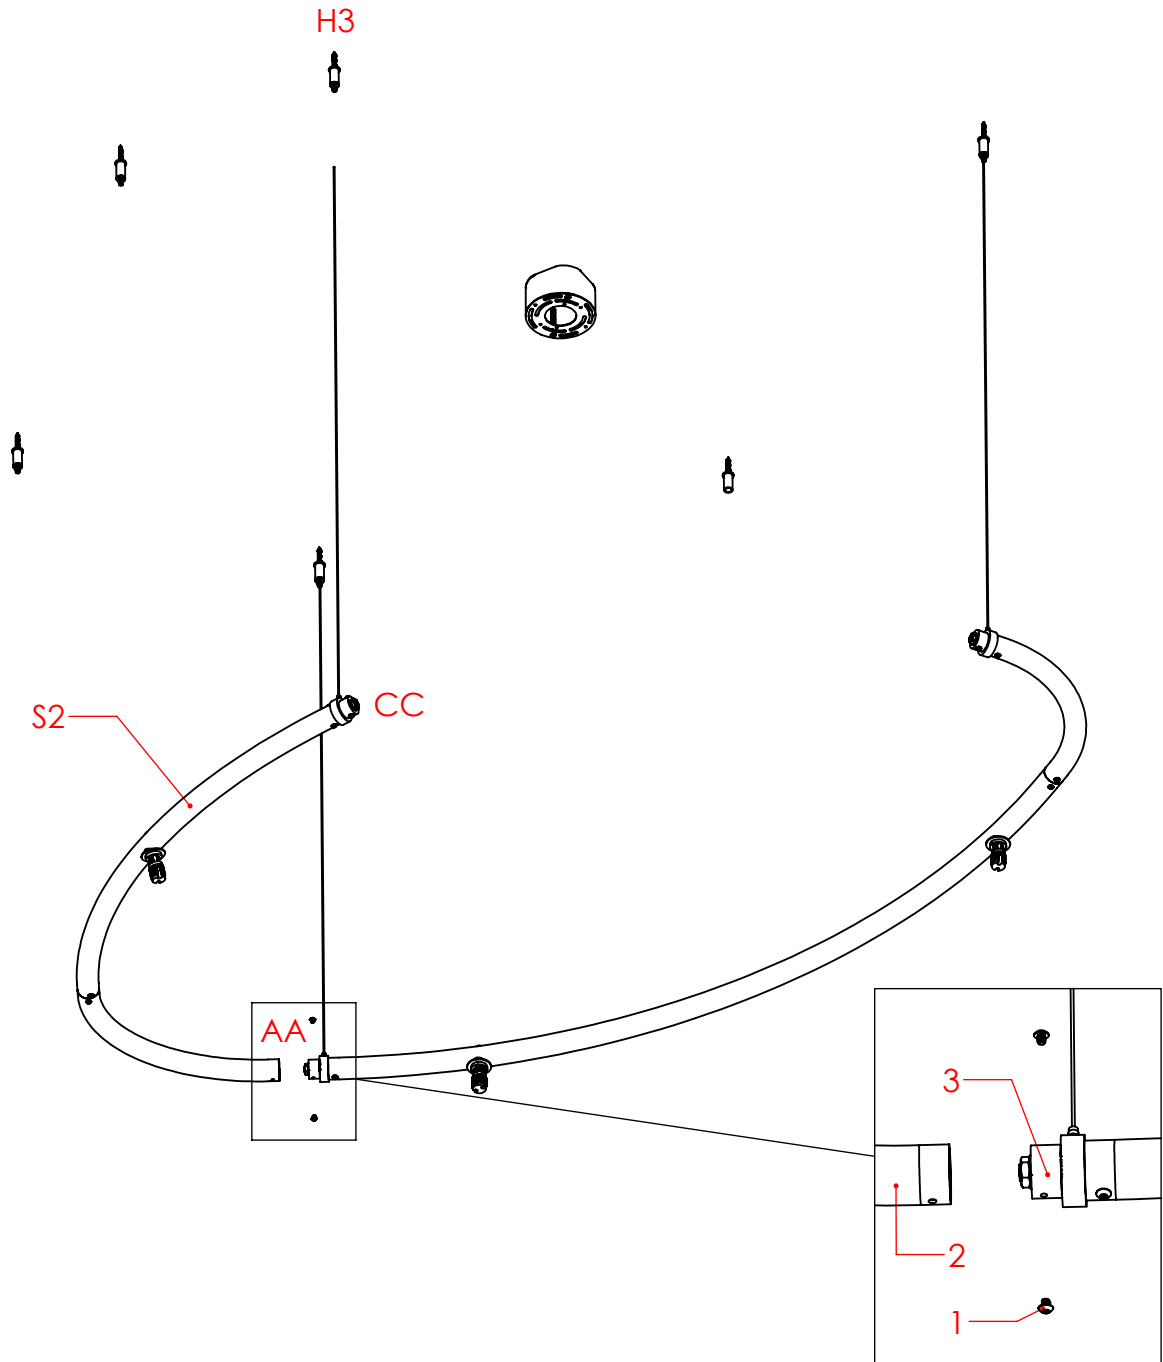

7. Locate the end of section S2 marked CC and repeat step 5 to secure cable to point H3.
8. At joint AA, securely couple the black wire emerging from S1 with the black wire emerging from S2. Do the same for the white wires.
9. Remove the two socket head screws [1] from male end of joint [3]. Slide tube end [2] onto the joint, then replace screws. Make sure screws are fully tightened.




SKETCH - LARGE

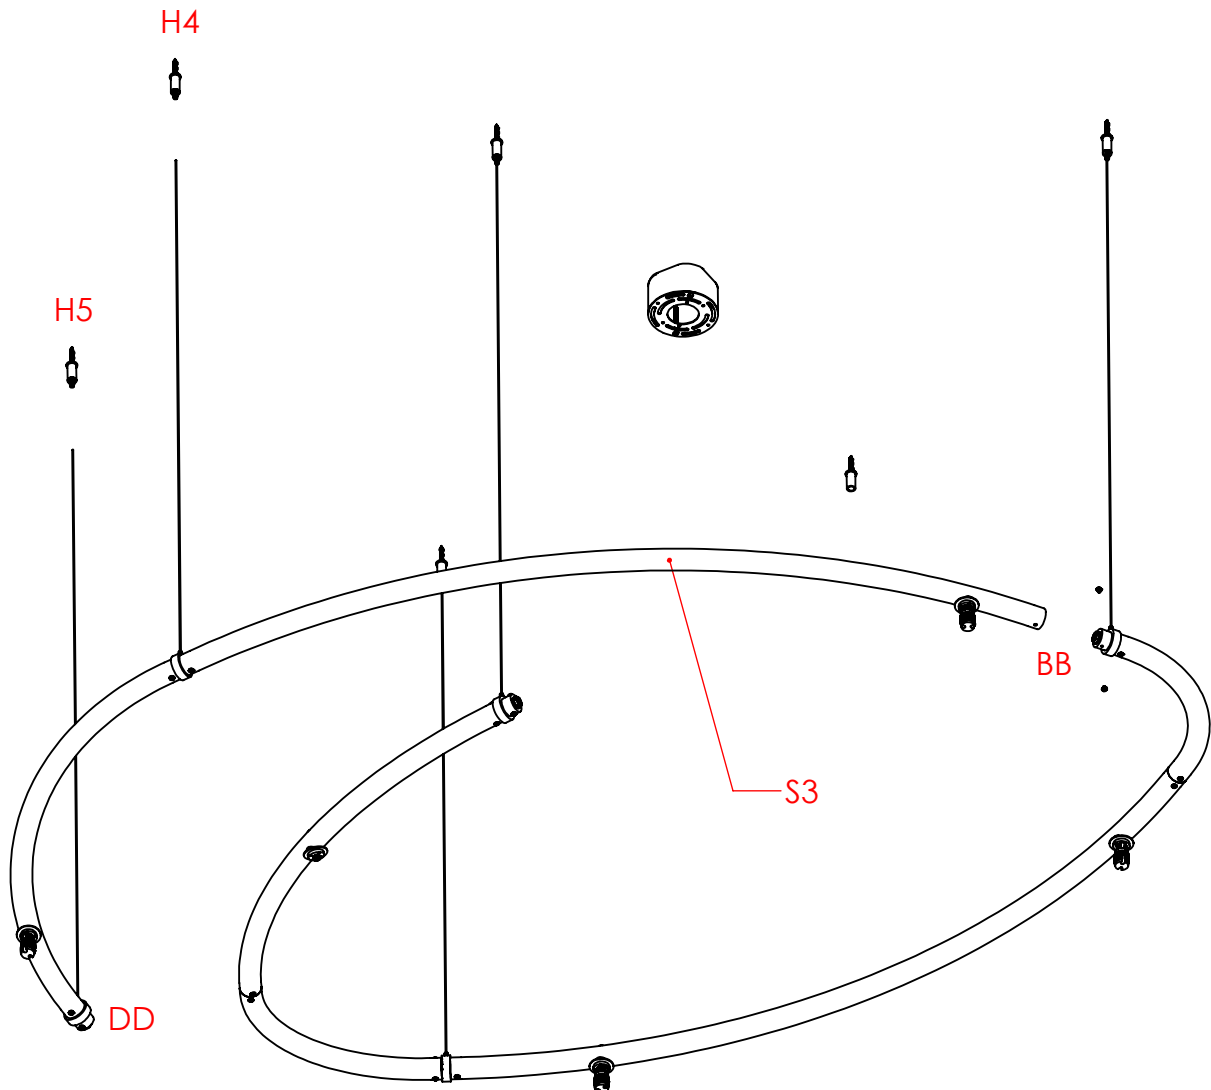

10. Locate the end of section S3 marked DD and repeat step 5 to secure cable to point H5.
11. Do the same with the center joint and point H4.
12. At joint BB, securely couple the black wire emerging from S1 with the black wire emerging from S3. Do the same for the white wires.
13. Remove socket head screws from joint end, then slide tube end onto joint and replace screws. Make sure screws are fully tightened.




SKETCH - LARGE

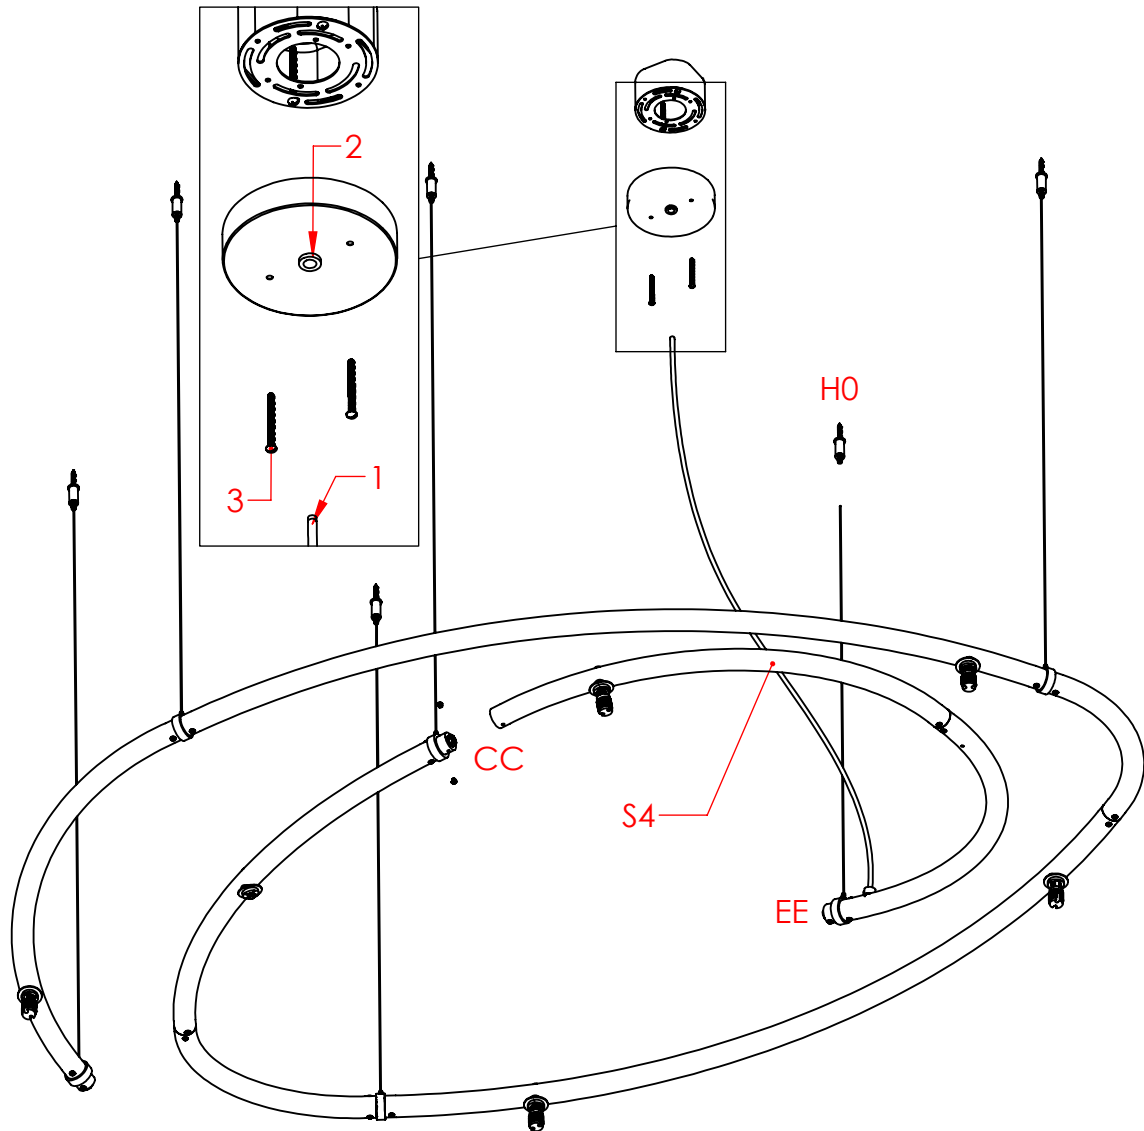

14. Locate the end of section S4 marked EE and repeat step 5 to secure cable to point H0.
15. Feed power cable (1) through cord bushing (2) in center of canopy and splice wires to those in the j-box, then tighten strain relief on interior of canopy.
16. Attached canopy to mounting bracket using included finished screws (3).
17. At joint CC, securely couple the black wire emerging from S2 with the black wire emerging from S4. Do the same for the white wires.
18. Remove socket head screws from joint end, then slide tube end onto joint and replace screws. Make sure screws are fully tightened.




SKETCH - LARGE

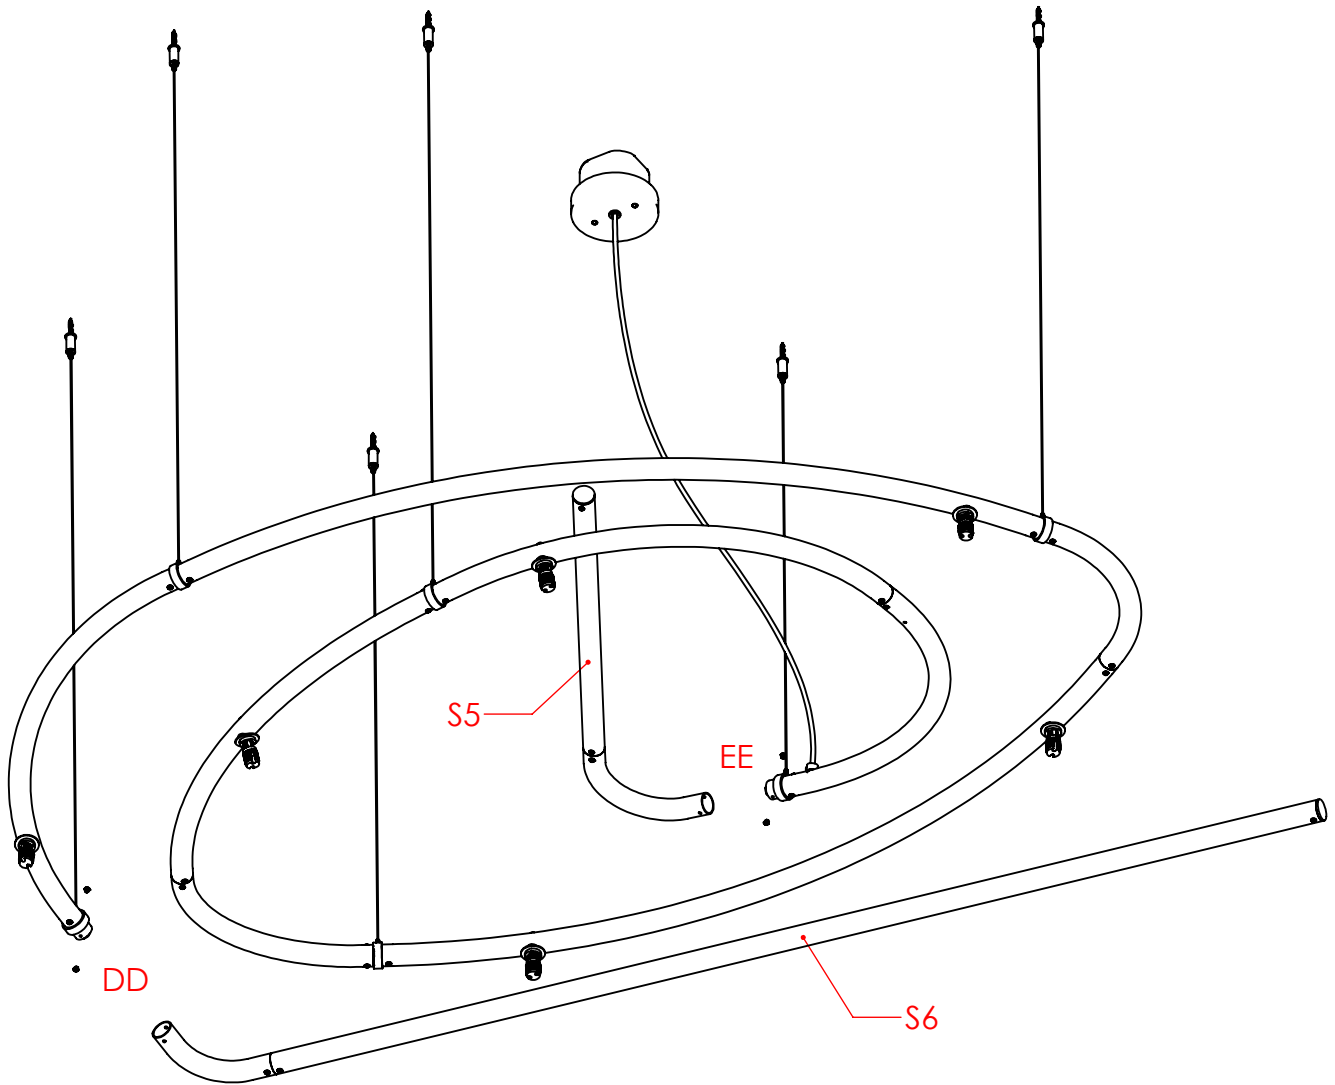

19. At joint EE, remove socket head screws from joint end, then slide open end of section S5 onto joint and replace screws. Make sure screws are fully tightened.
20. Repeat step 19 for joint DD and section S6. **WHILE TIGHTENING SCREWS, MAKE SURE SECTION S6 IS HELD AT THE CORRECT HEIGHT/ANGLE, AND THE FREE END IS NOT HANGING TOO LOW.**



SKETCH - LARGE

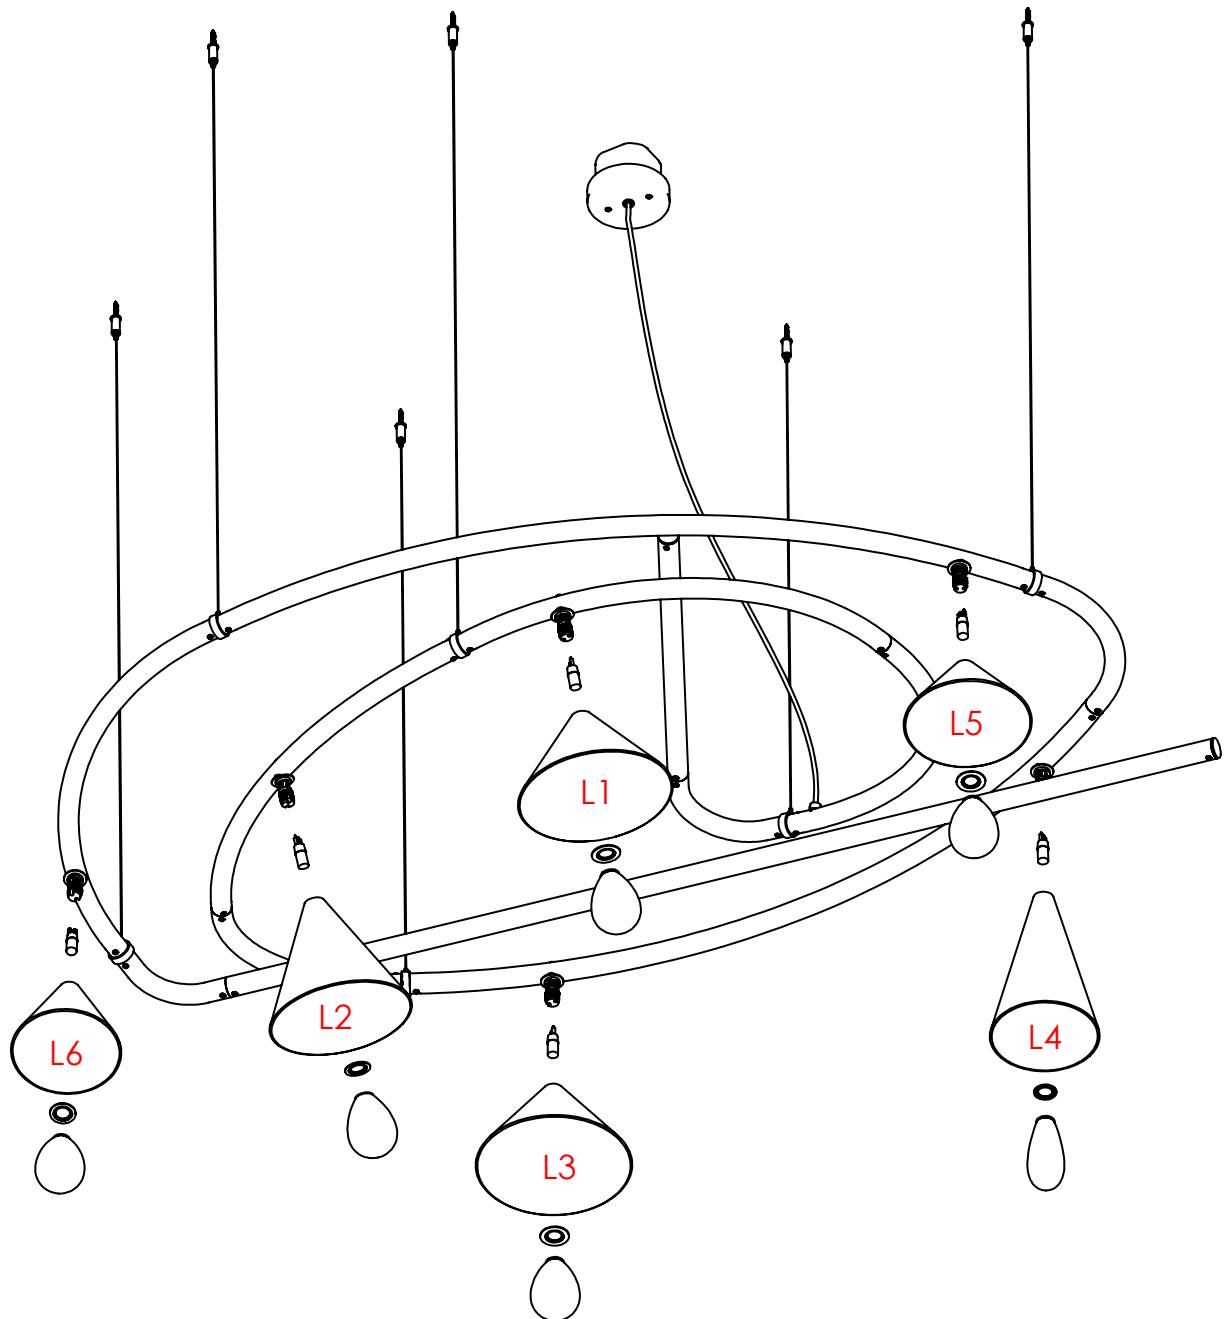

21. Install included G9 LED bulbs into sockets.
22. Locate socket L1 and shade assembly L1. Slide porcelain shade over bulb and socket until it is resting on the silicone gasket.
23. While holding porcelain shade in position, balance check washer L1 on top of open end of globe L1 (silicone side up) and screw the globe onto the external threads of the socket until the shade is held securely in place between the two silicone surfaces.
DO NOT OVERTIGHTEN. PORCELAIN WILL CRACK UNDER EXCESSIVE FORCE.
24. Repeat steps 22 and 23 for shade assemblies L2 through L6.



SKETCH - LARGE

