



---

# TRIPLET SCNCE

## SAFETY INFORMATION

Please contact a licensed electrician for installation.

Suitable for dry, indoor use only.


Maximum ambient temperatures: 25°C

---

## LAMPING


Integrated LED board with warm dimming, 2700K-1800K. ~36V,  
12W, 500 lumens. 120V/240VAC compatible transformer included, housed in fixture.

---

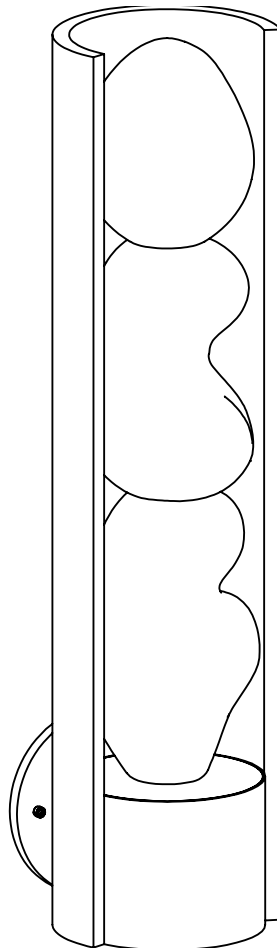



# TRIPLER SCONCE

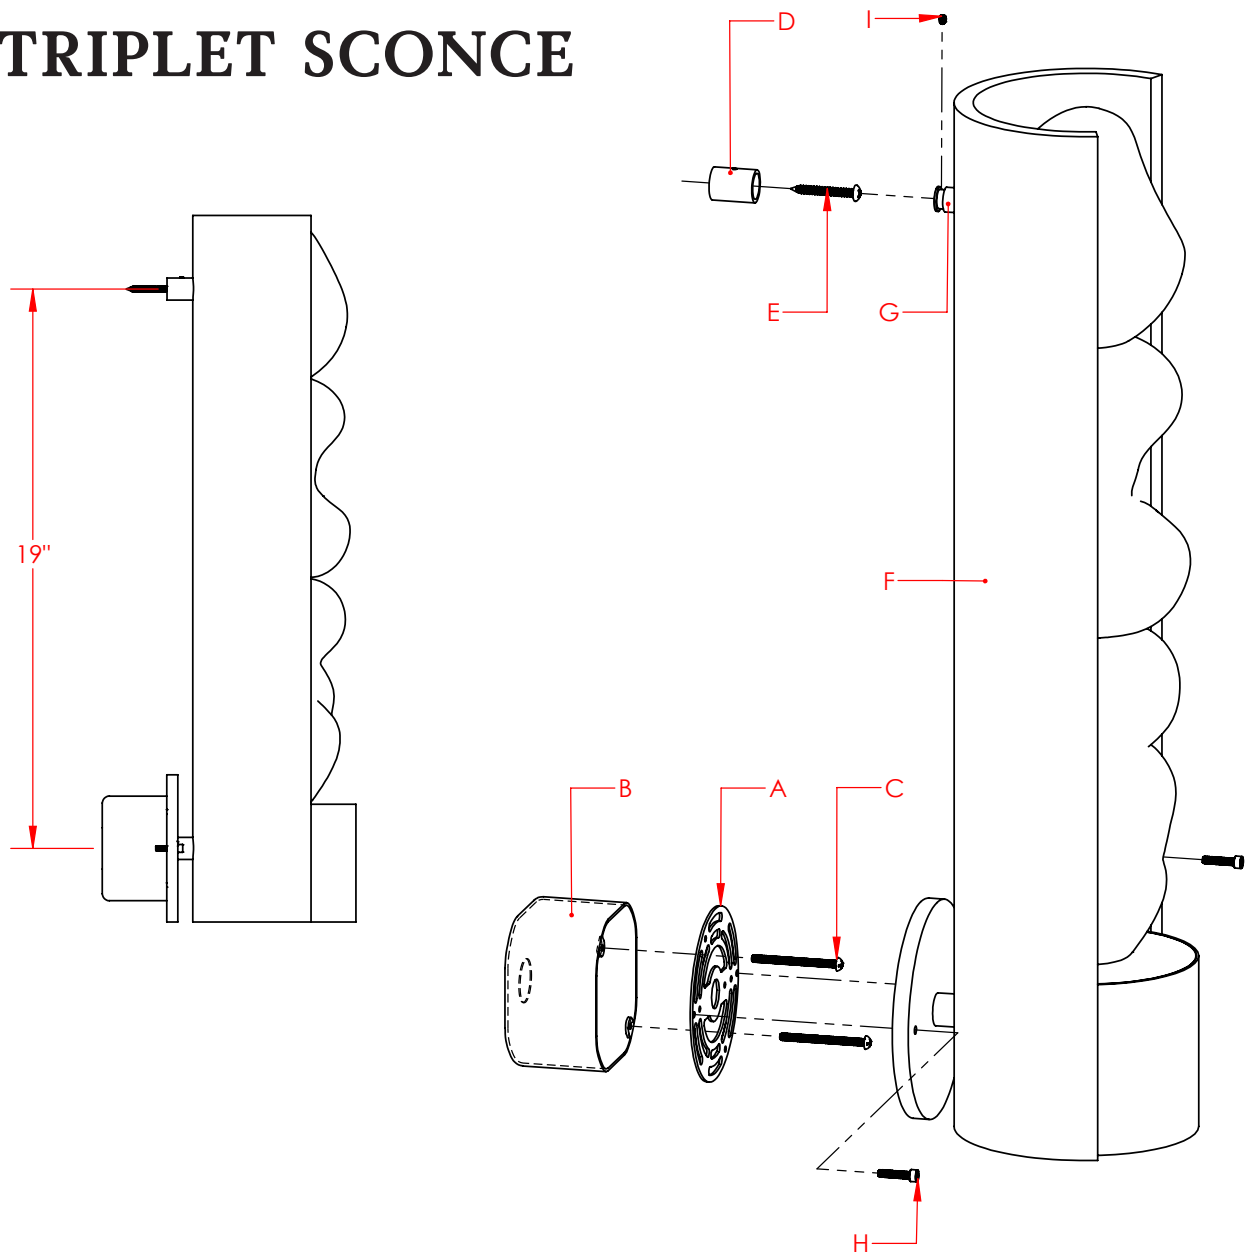

**AFTER UNWRAPPING, THERE WILL BE A LAYER OF FOAM BETWEEN THE GLASS SHADES AND THE CYLINDRICAL FIXTURE BODY. DO NOT REMOVE THIS FOAM UNTIL AFTER INSTALLATION IS COMPLETE.**

1. Attach mounting bracket (A) to j-box (B) using included steel screws (C).
2. Install mounting post (D) on wall above j-box, using appropriate anchor hardware (E, NOT INCLUDED). Distance between mounting bracket and mounting post should be 19", center to center [see above].
3. Splice wires in j-box using included wire nuts, then bring fixture body flush to the wall, making sure that coupling (G) slides into mounting post (D).
4. Attach backplate to mounting bracket using finished screws (H), then push the top of the fixture firmly against the wall, and tighten set screw (I) to secure in place.