



URN SCONCE

SAFETY INFORMATION


Please contact a licensed electrician for installation.

Suitable for dry, indoor use only.

Maximum ambient temperatures: 25°C


LAMPING

1 4.5W G9 LED bulb, 2700K color temperature.

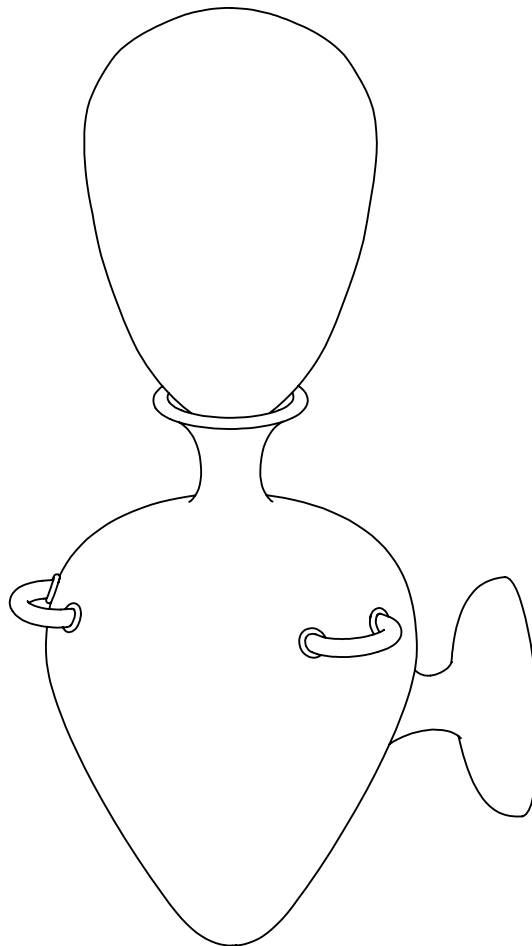



URN SCONCE

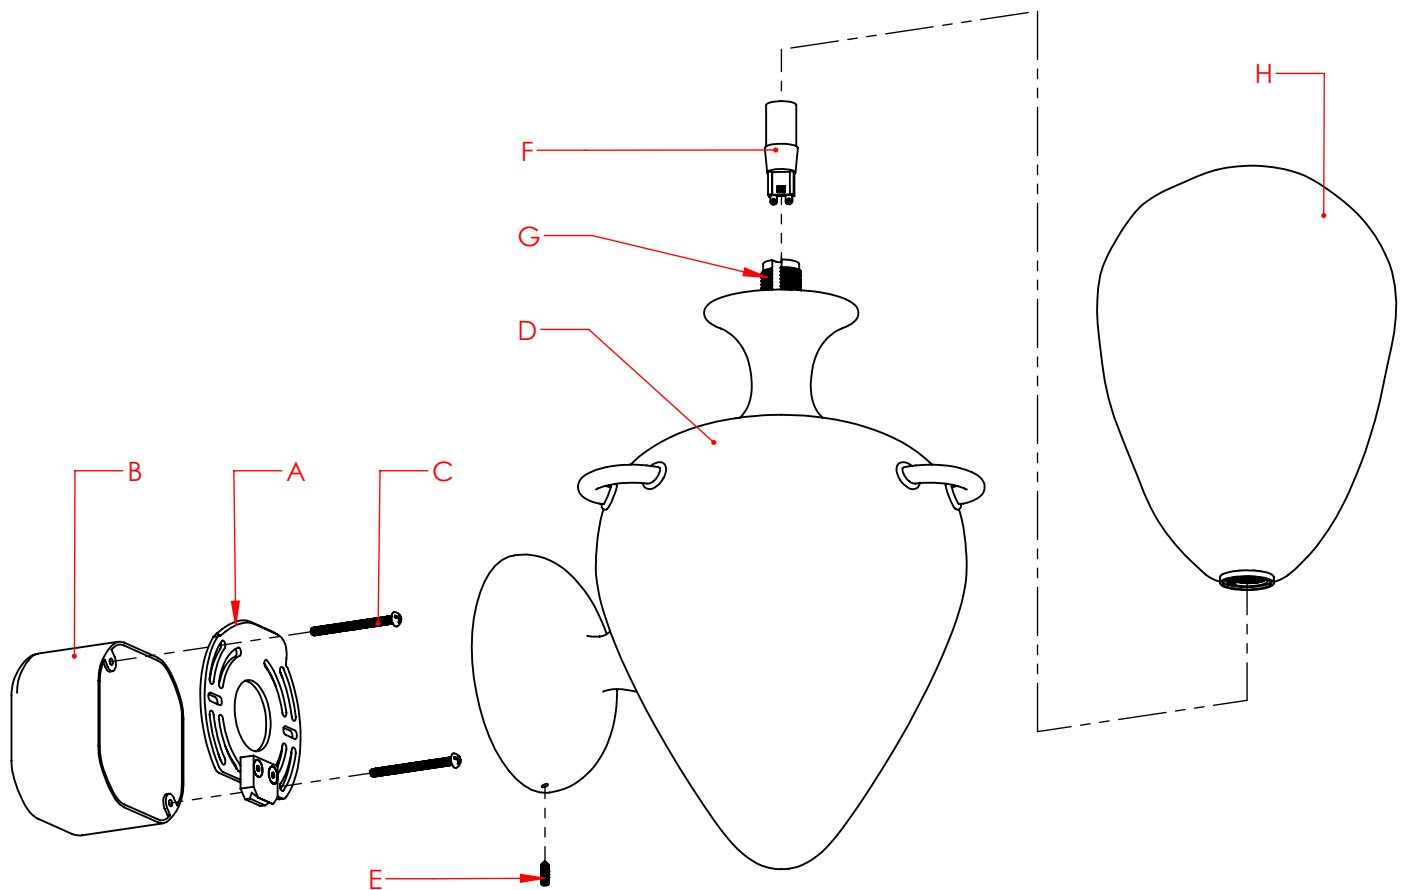

1. Attach bracket assembly (A) to j-box (B) using included steel screws (C). Make sure that the top edge is level.
2. Splice wires in j-box using included wire nuts, then hang fixture body (D) onto bracket (A) using the internal cleat rail. Tighten set screw (E) to secure in place, making sure that the set screw makes contact with the V-groove at bottom of the bracket assembly.
3. Install included bulb (F) into socket (G), then thread glass shade (H) onto socket skirt.
DO NOT OVER-TIGHTEN.